
 



**FIG. 1**

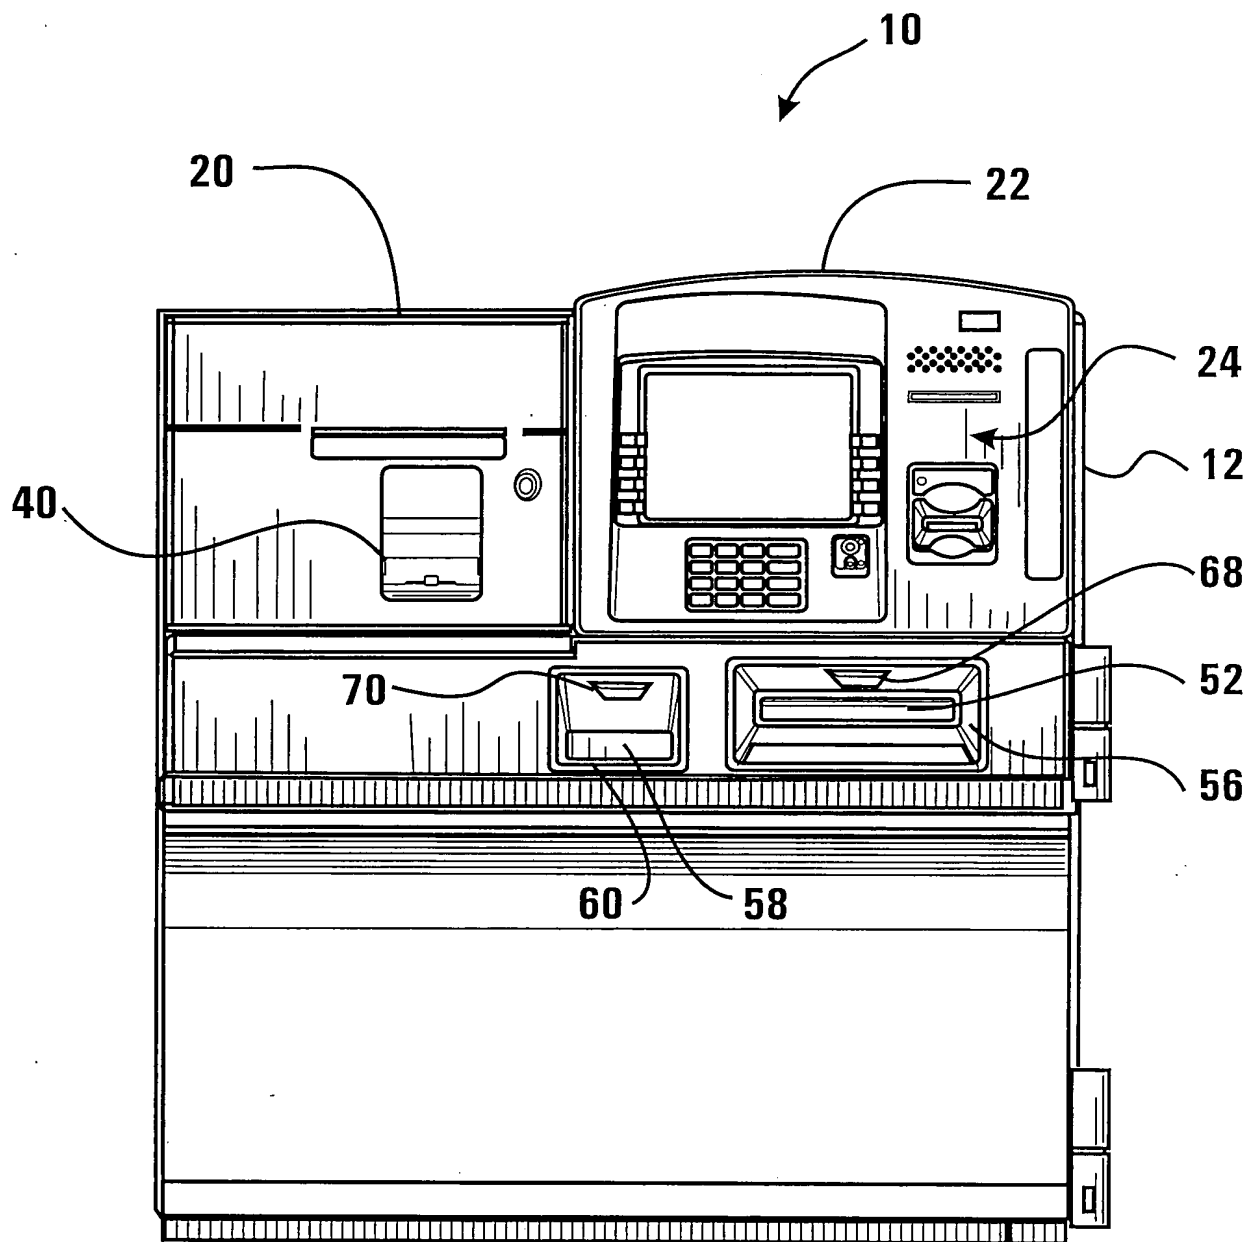 


**FIG. 2**

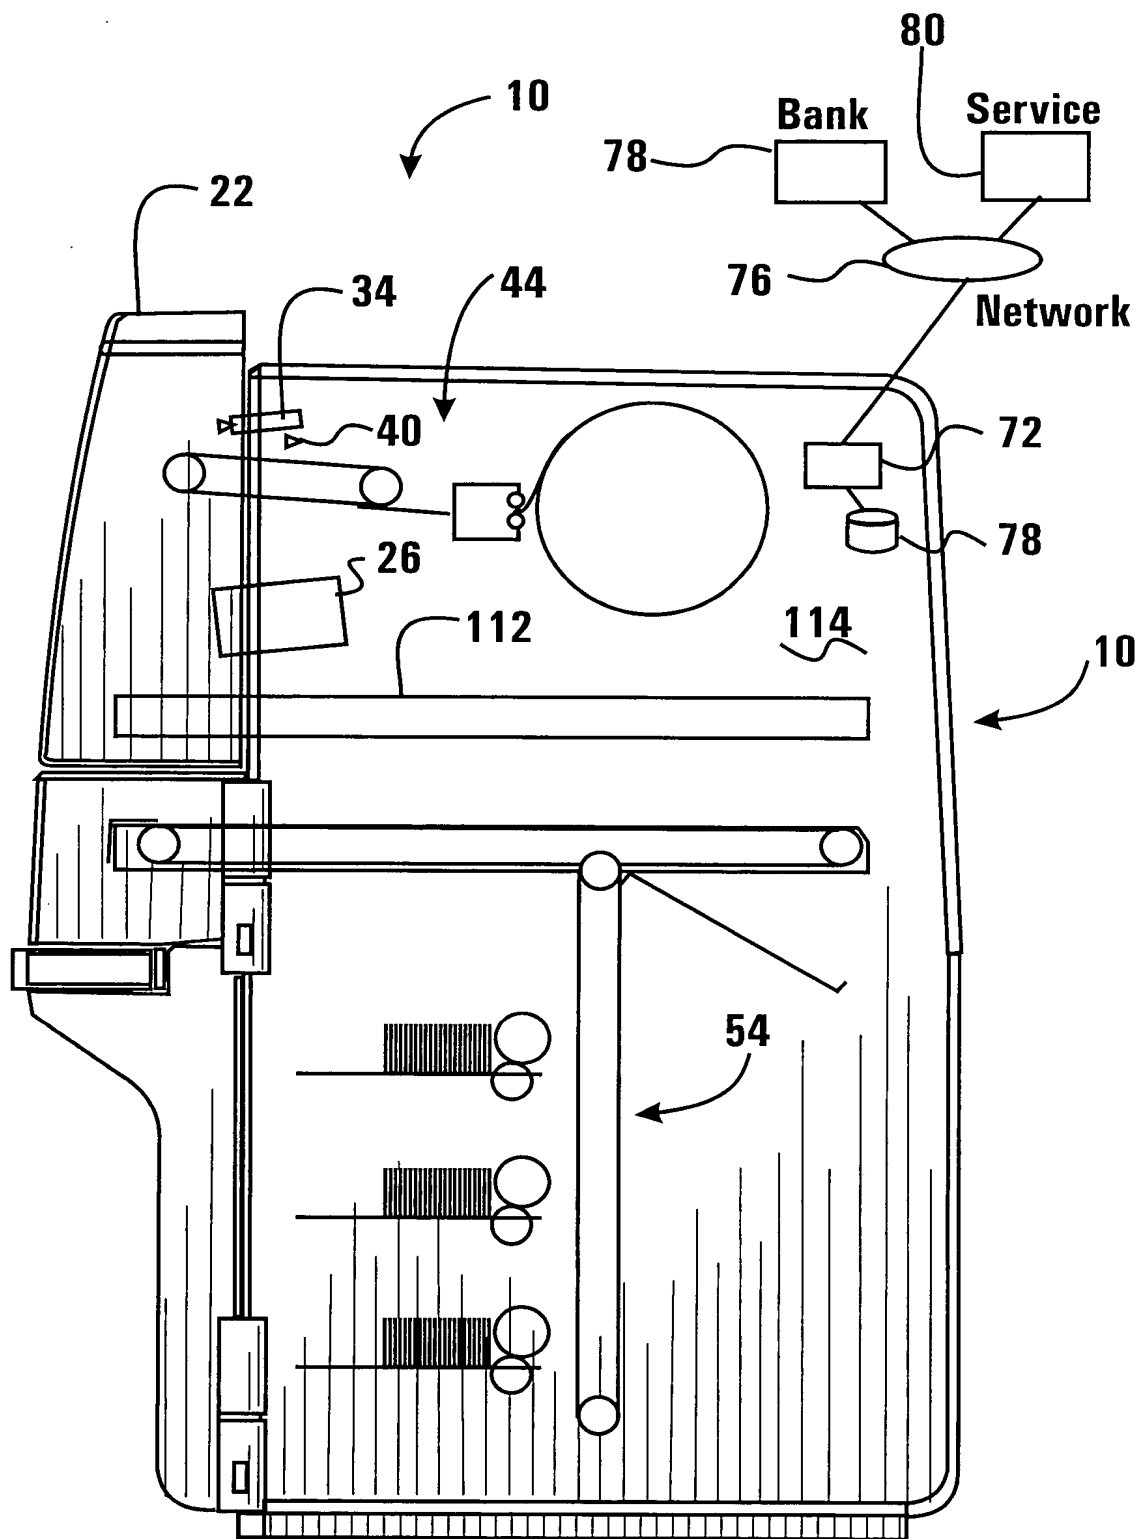


**FIG. 3**

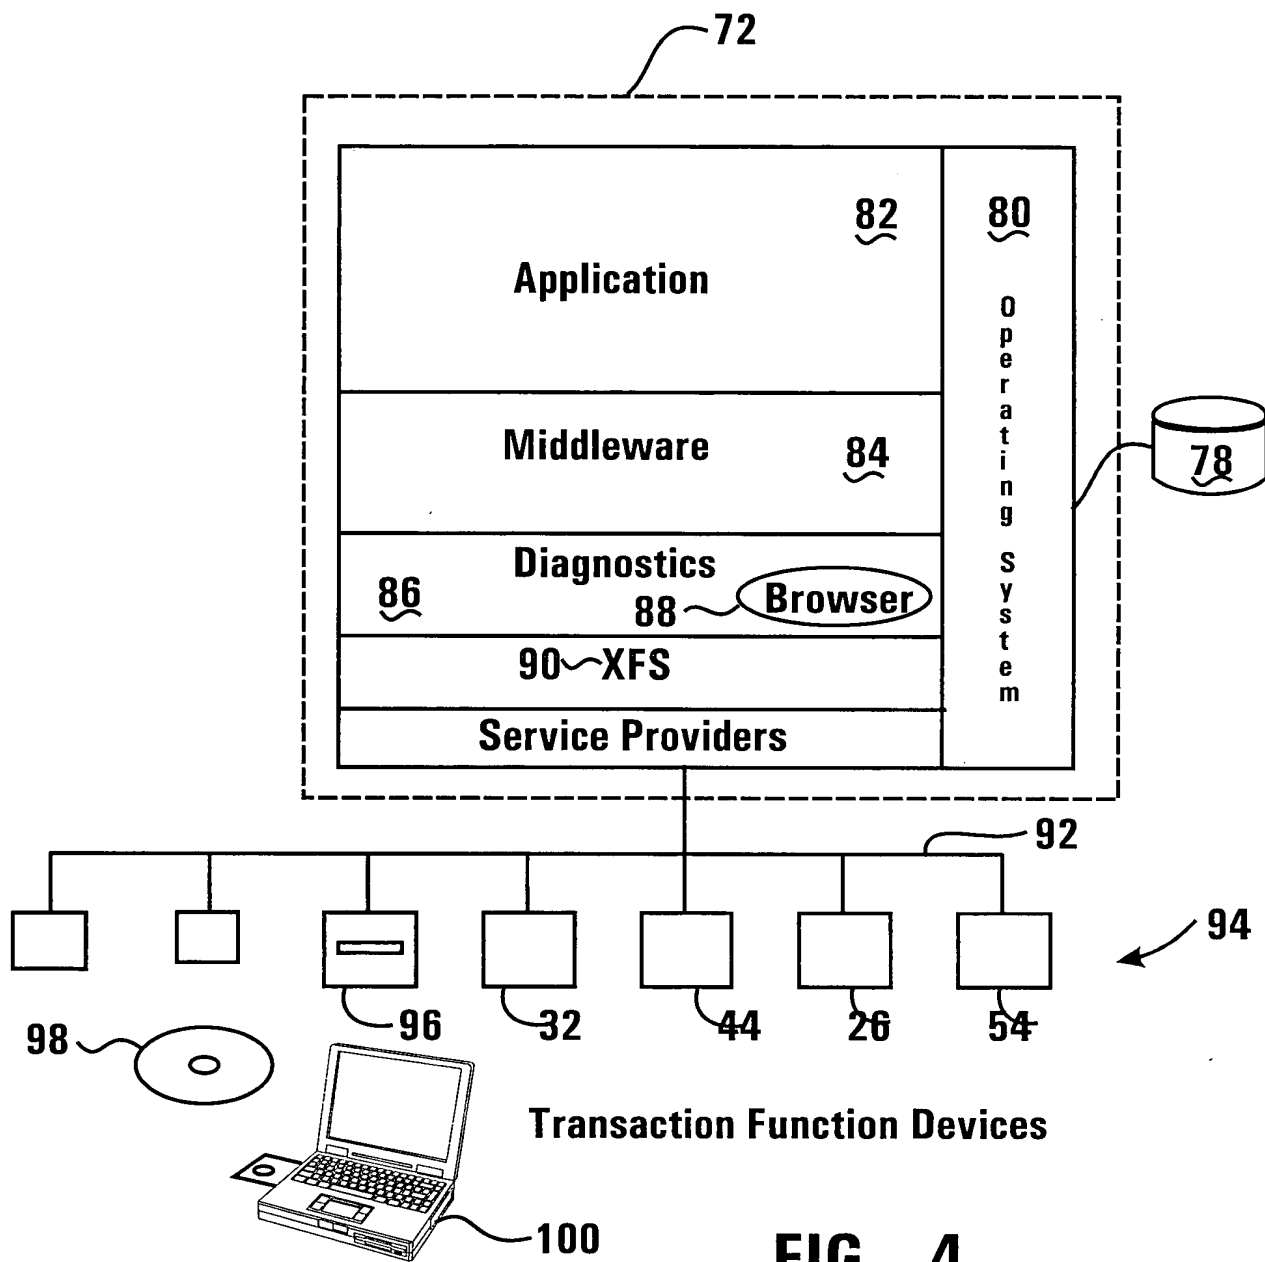 


**FIG. 4**

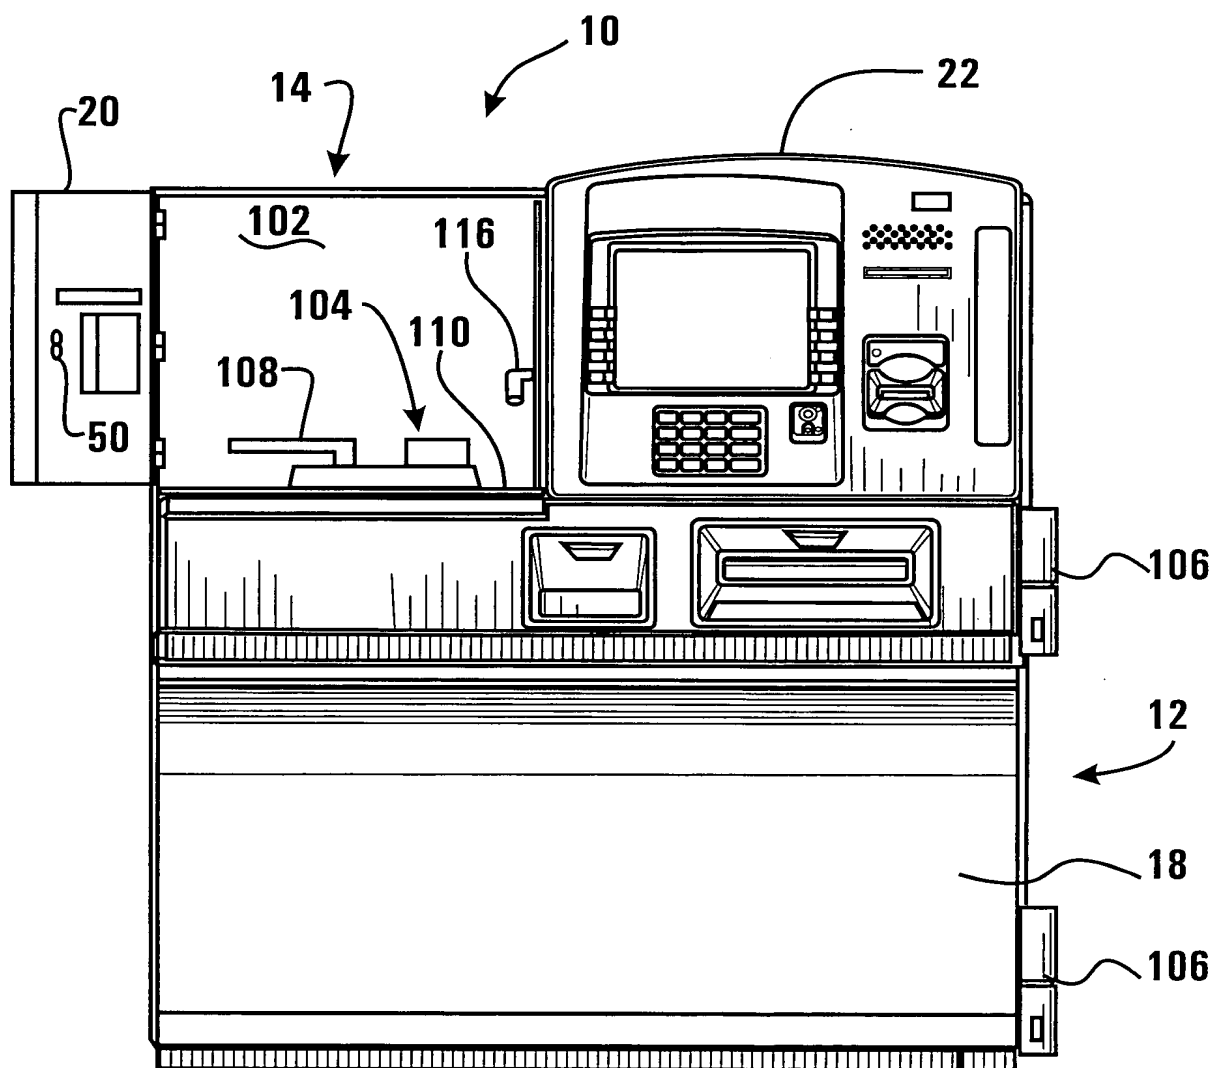 


**FIG. 5**

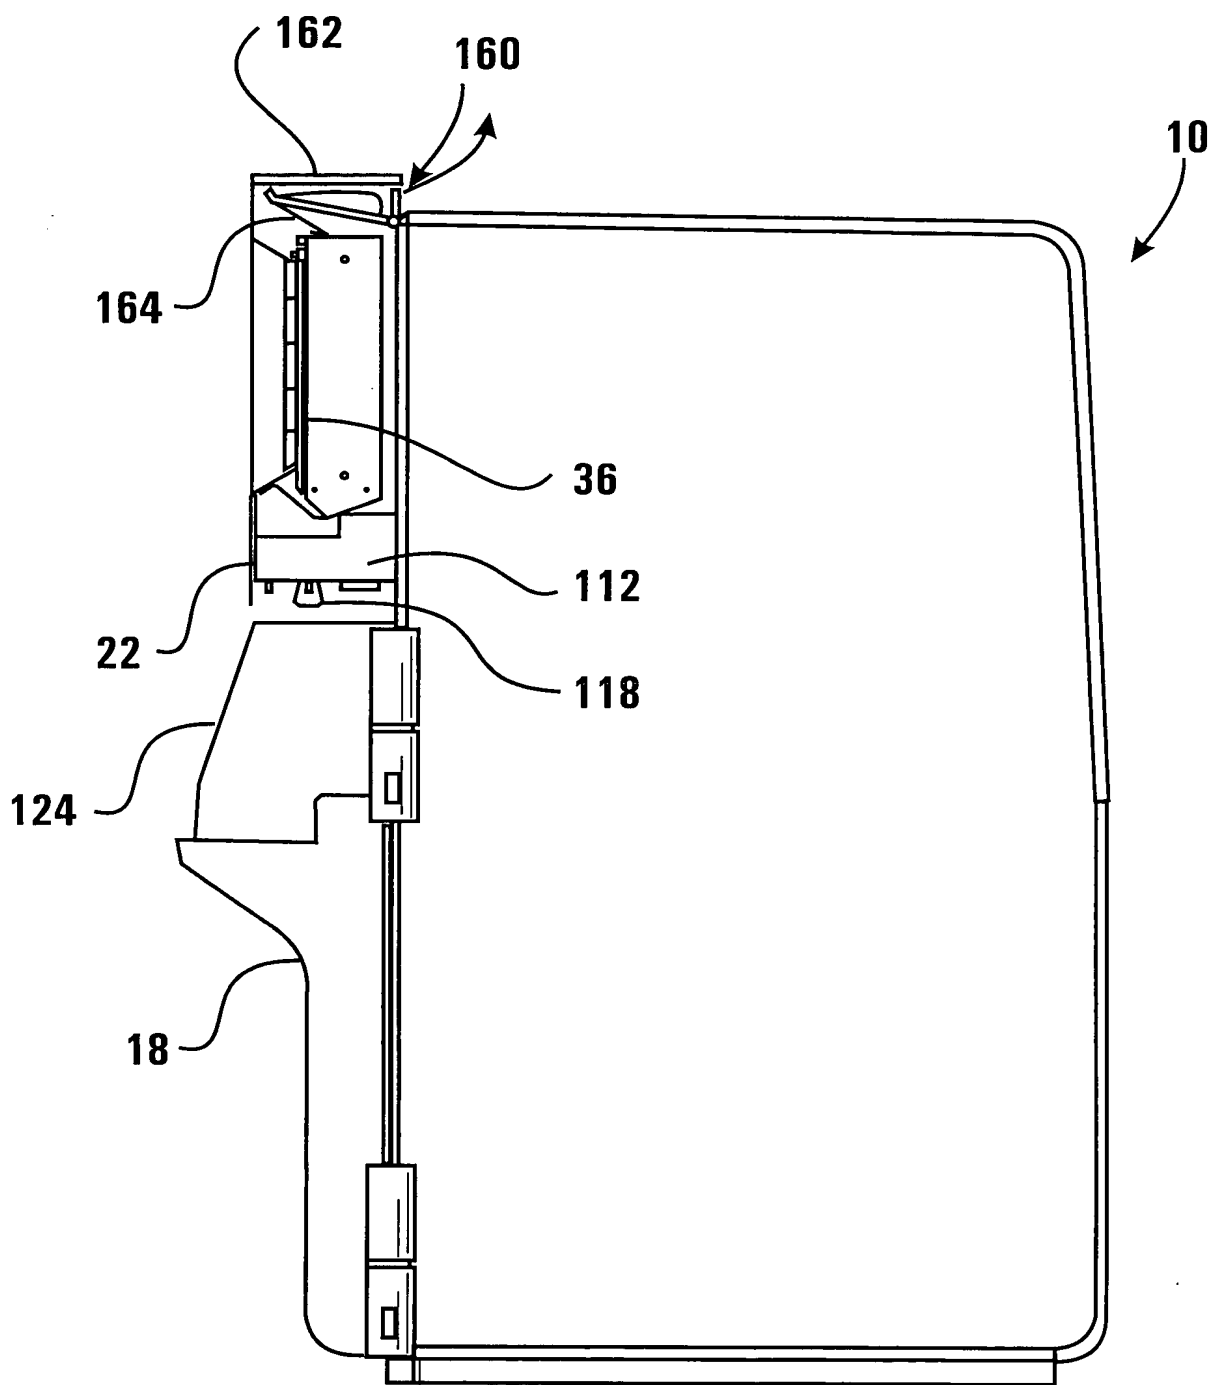 

  **FIG. 6**

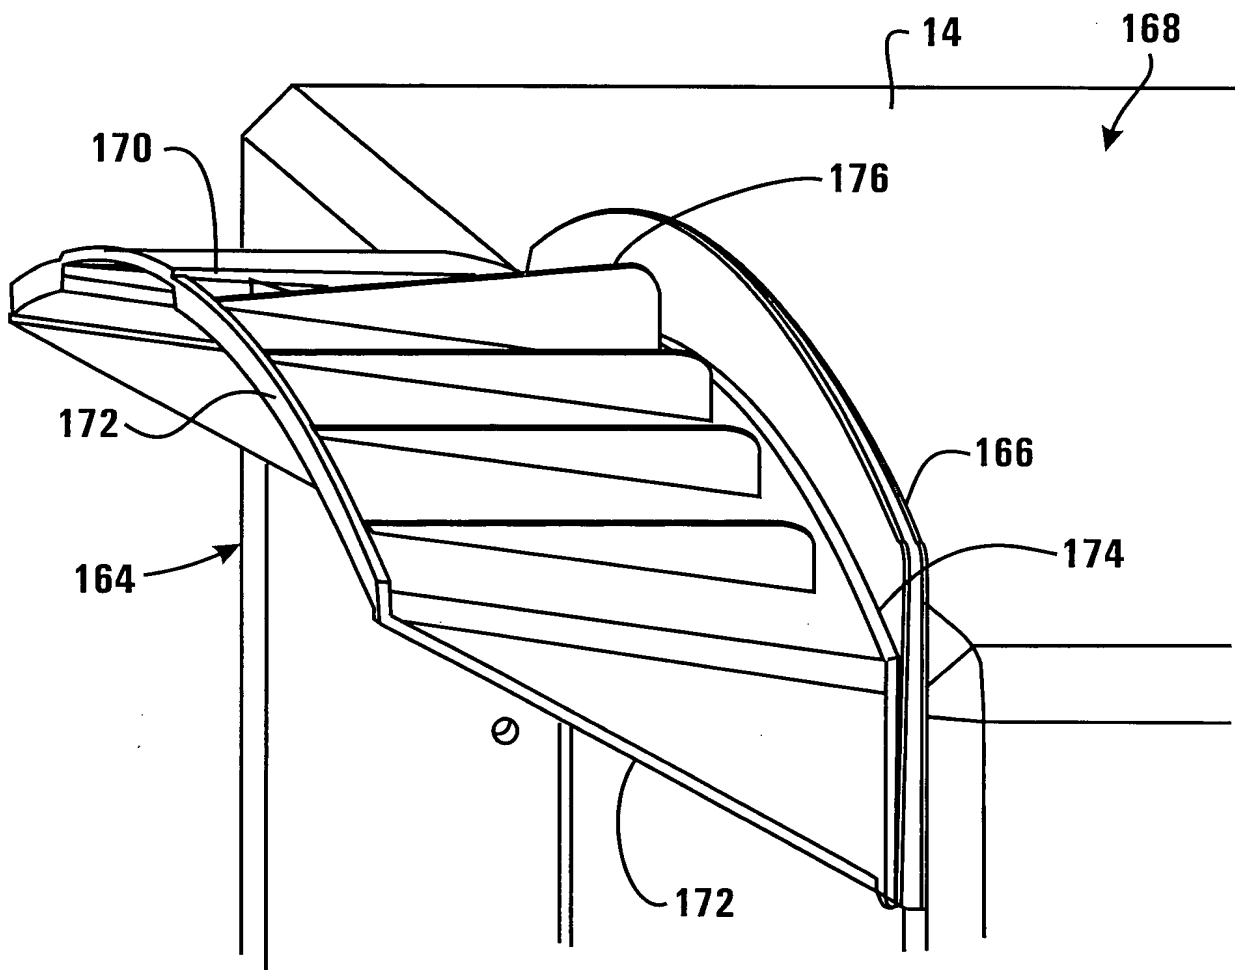 


**FIG. 7**

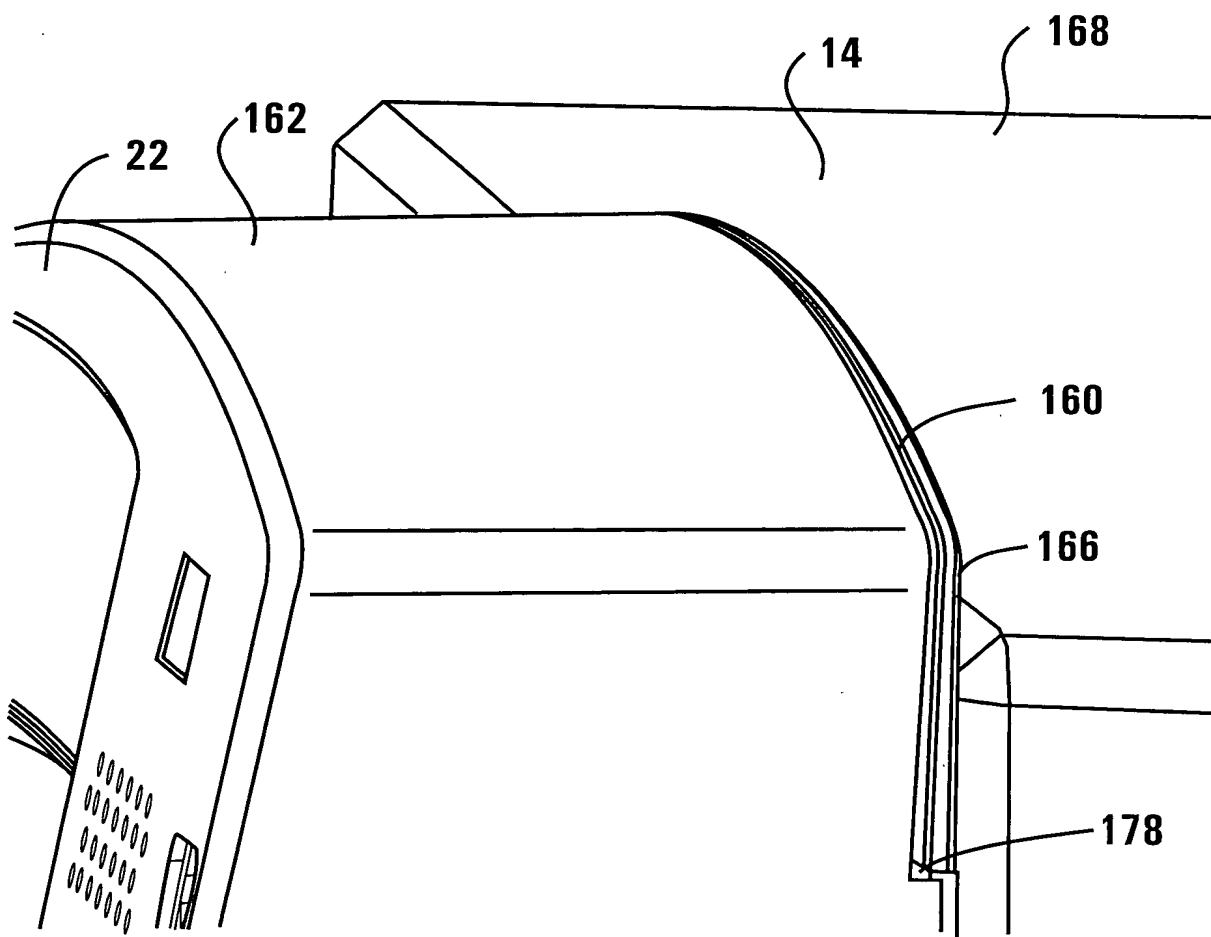 



**FIG. 8**



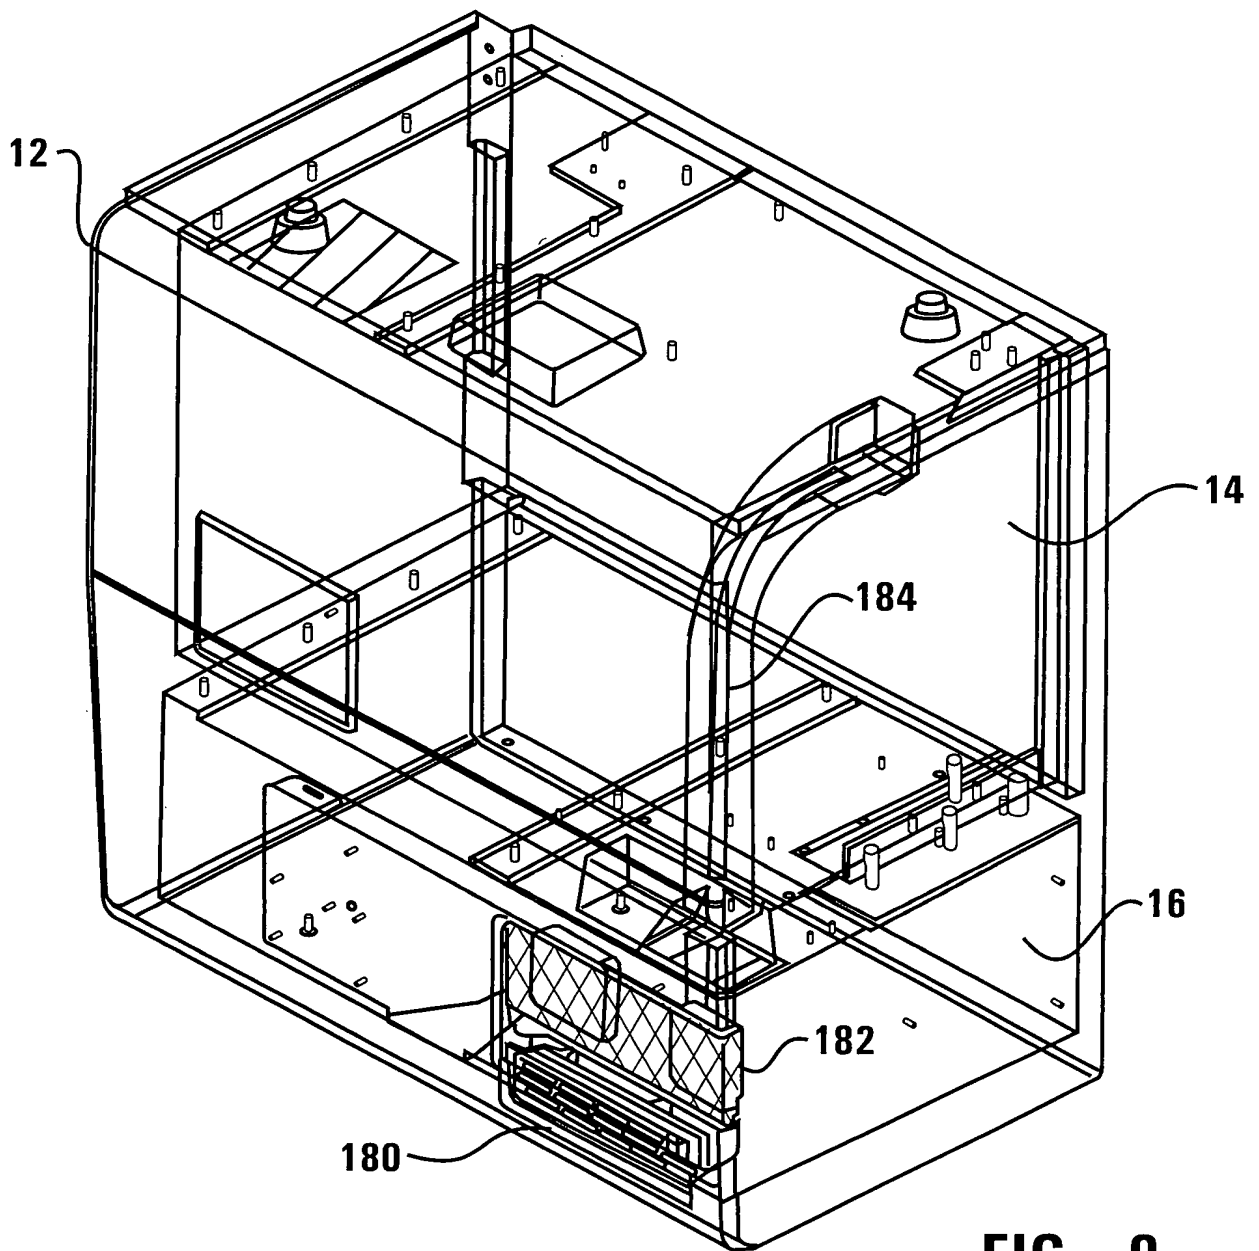


**FIG. 9**

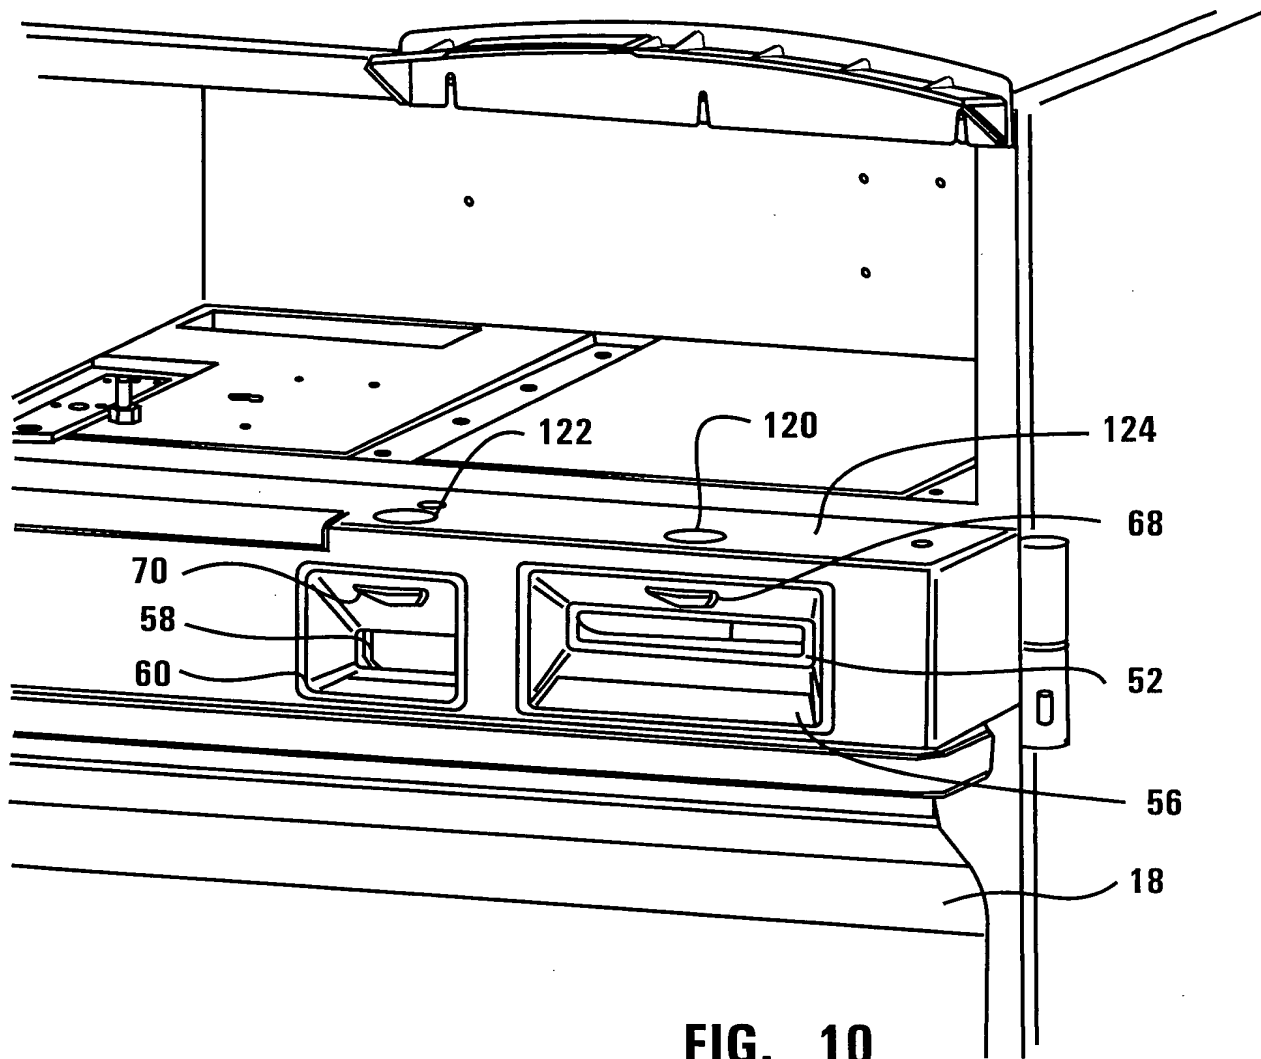


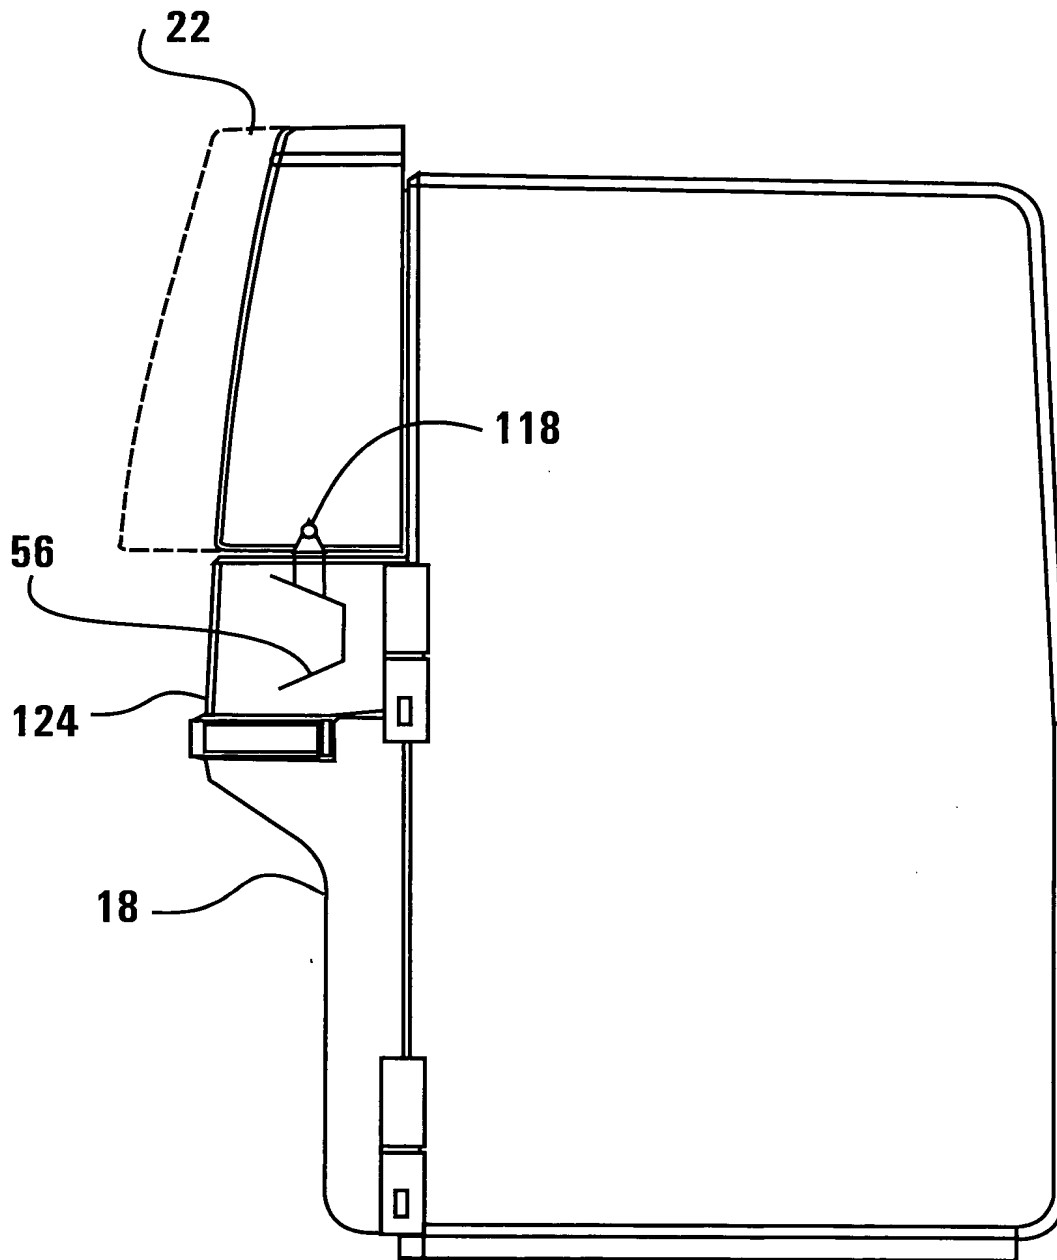 


**FIG. 11**

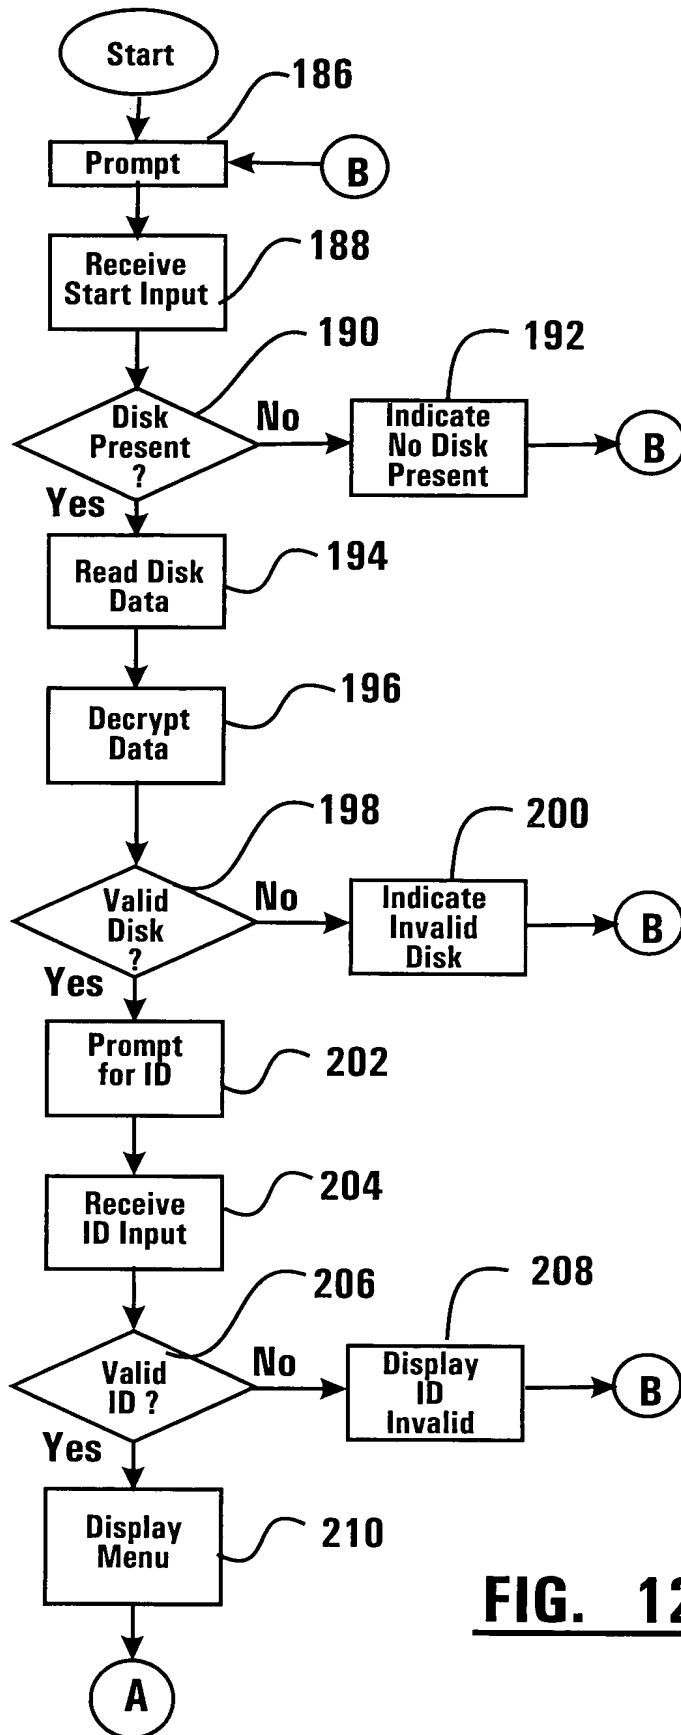 


**FIG. 12**

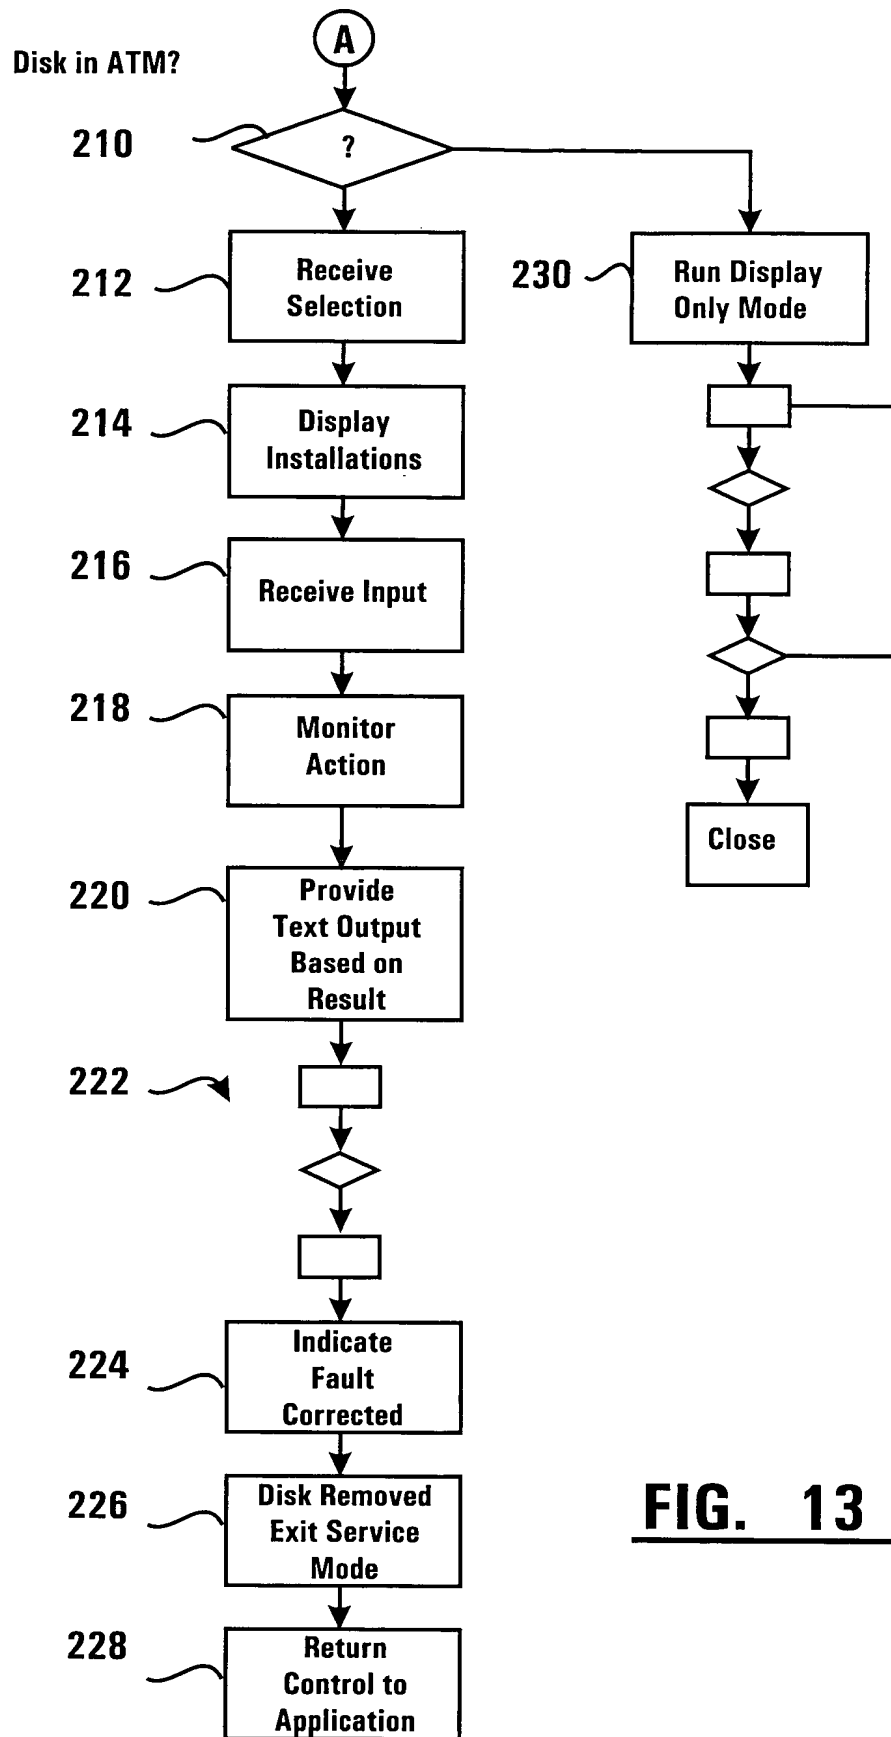 


**FIG. 13**

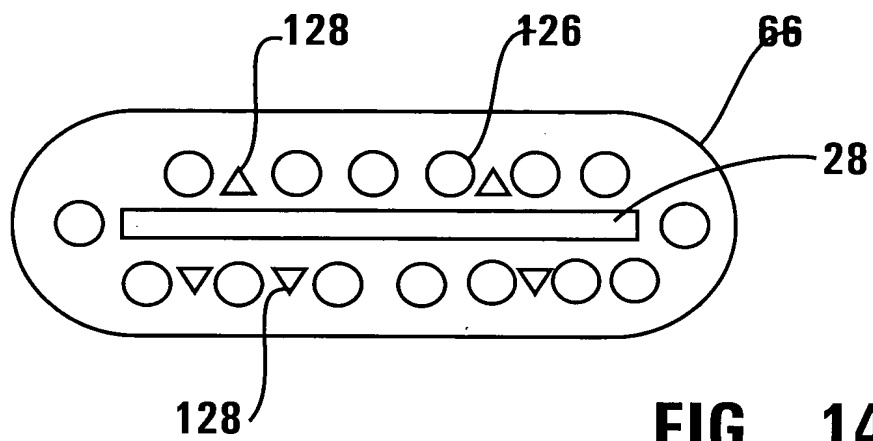 


**FIG. 14**

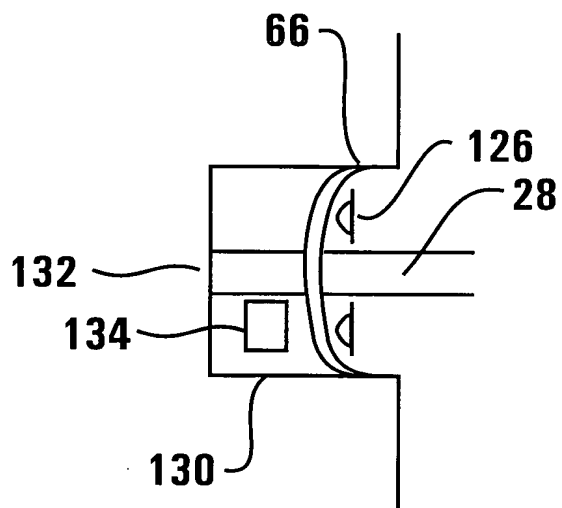 

**FIG. 15**

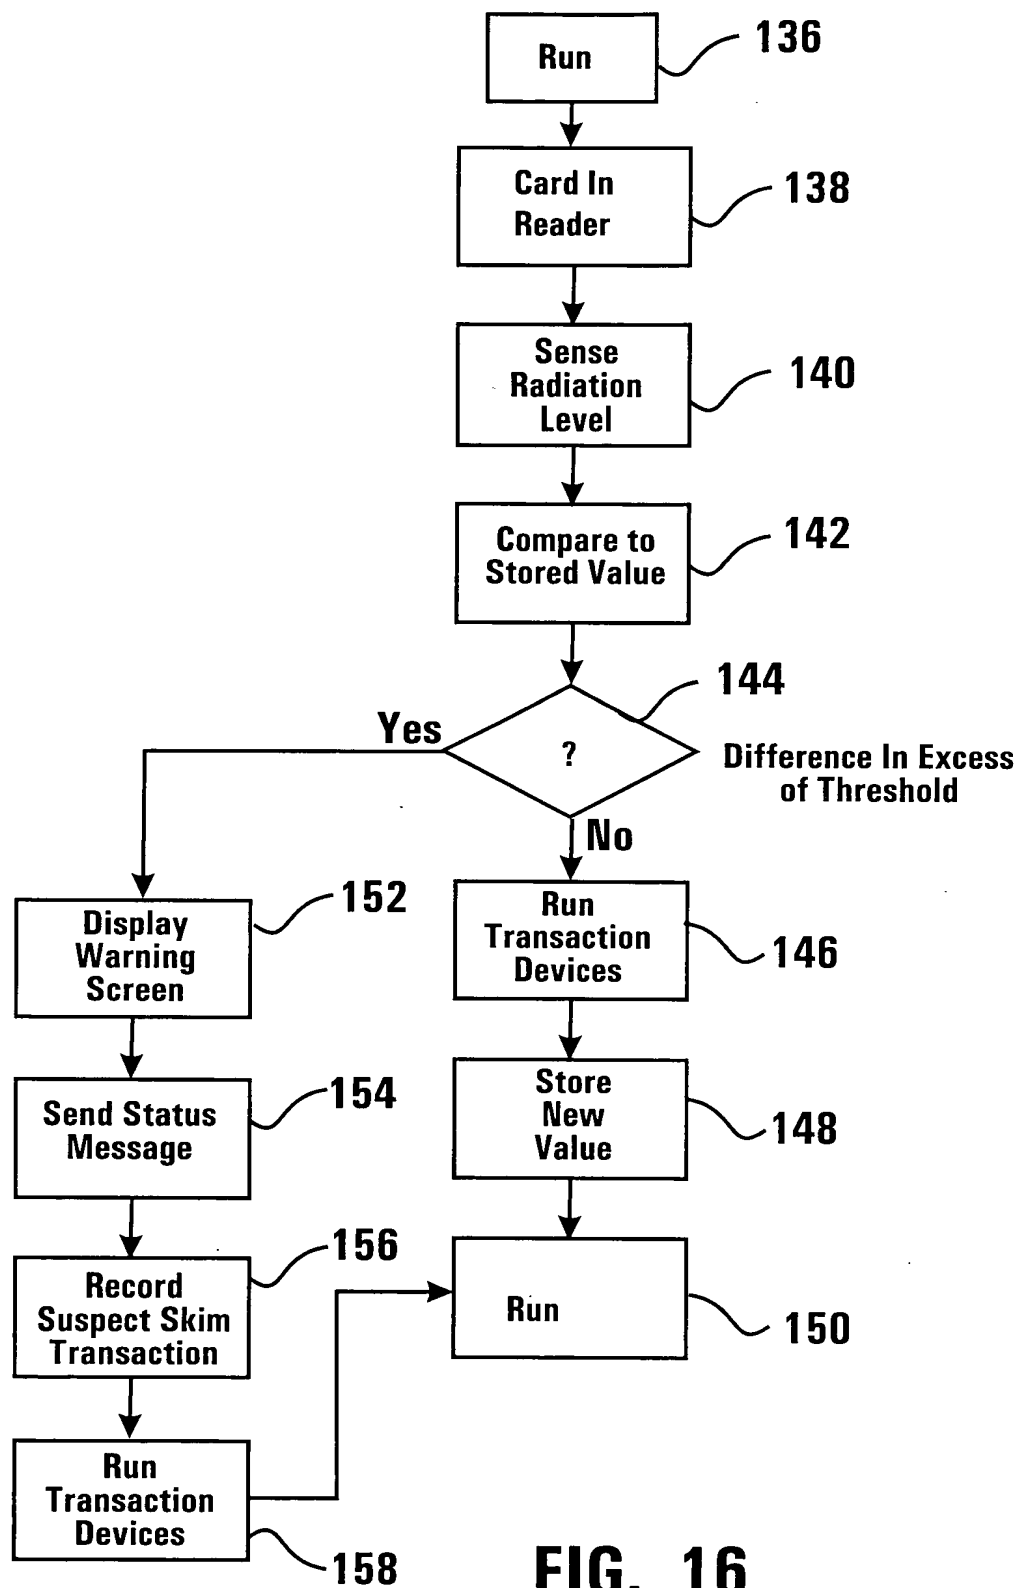 


**FIG. 16**

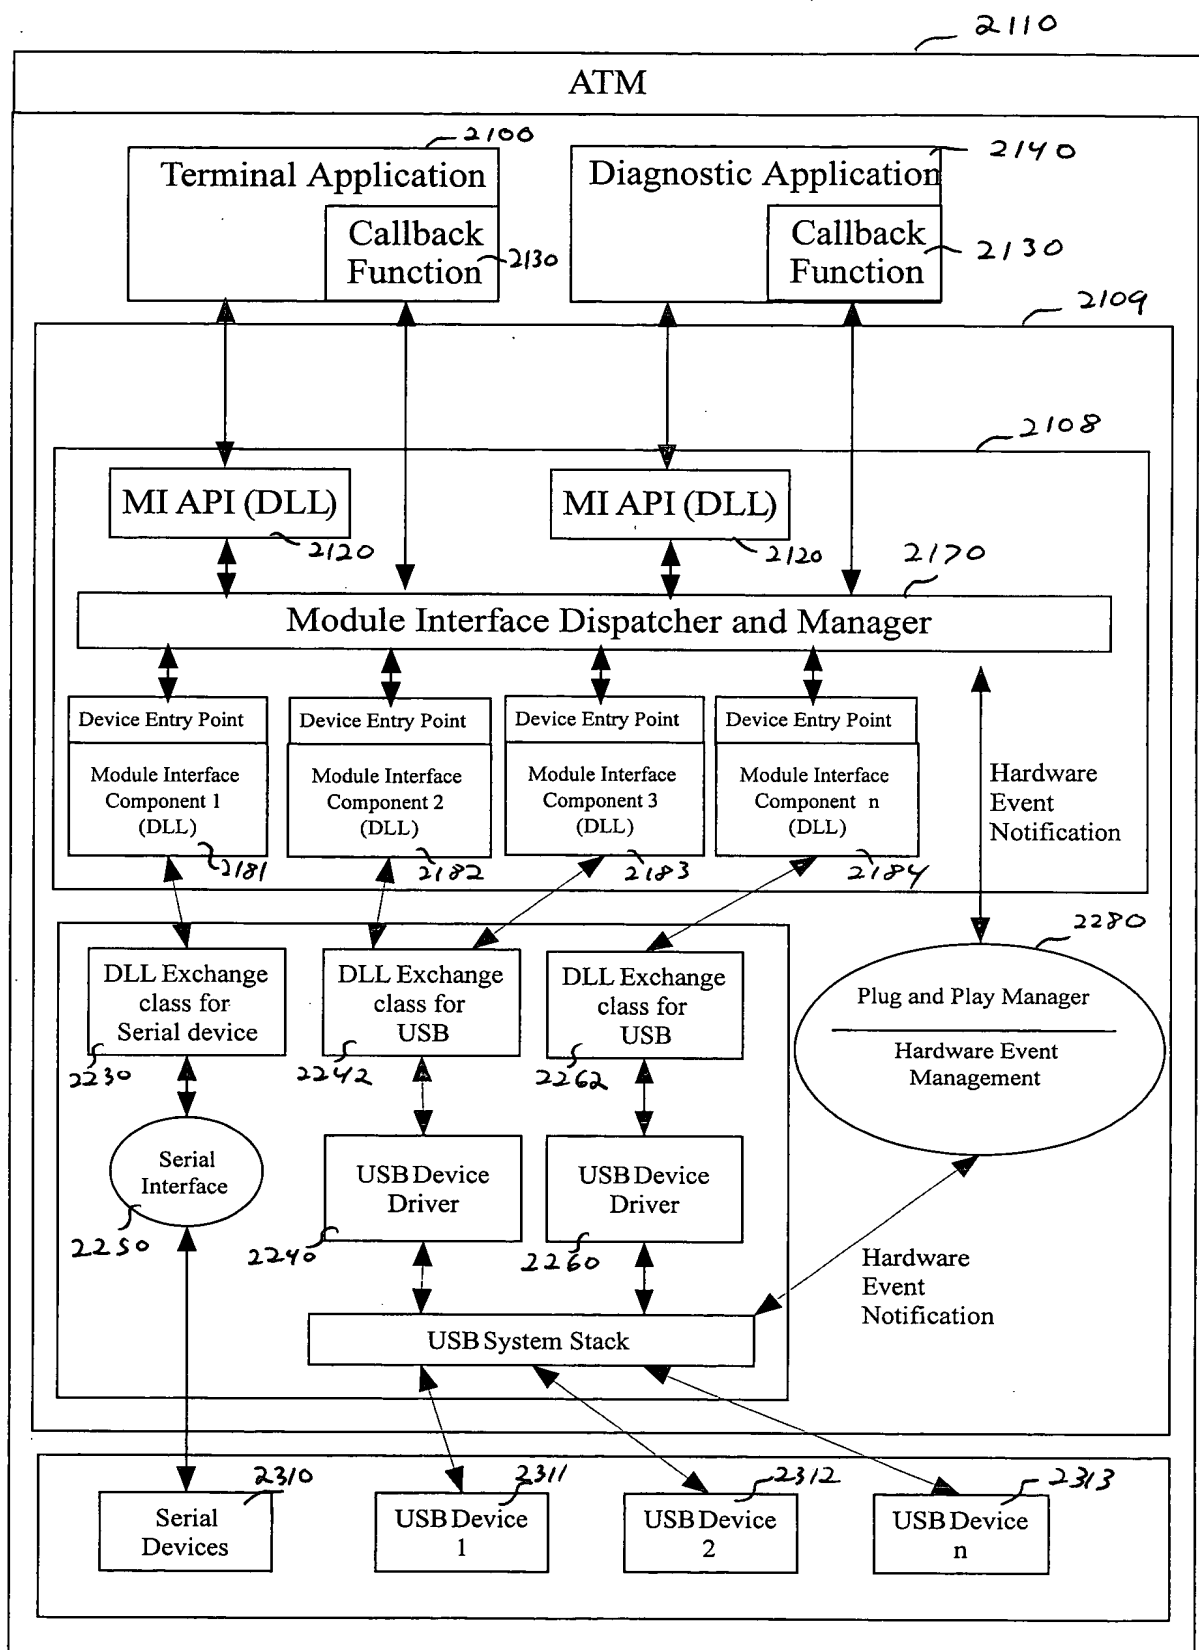 

**FIG. 17**



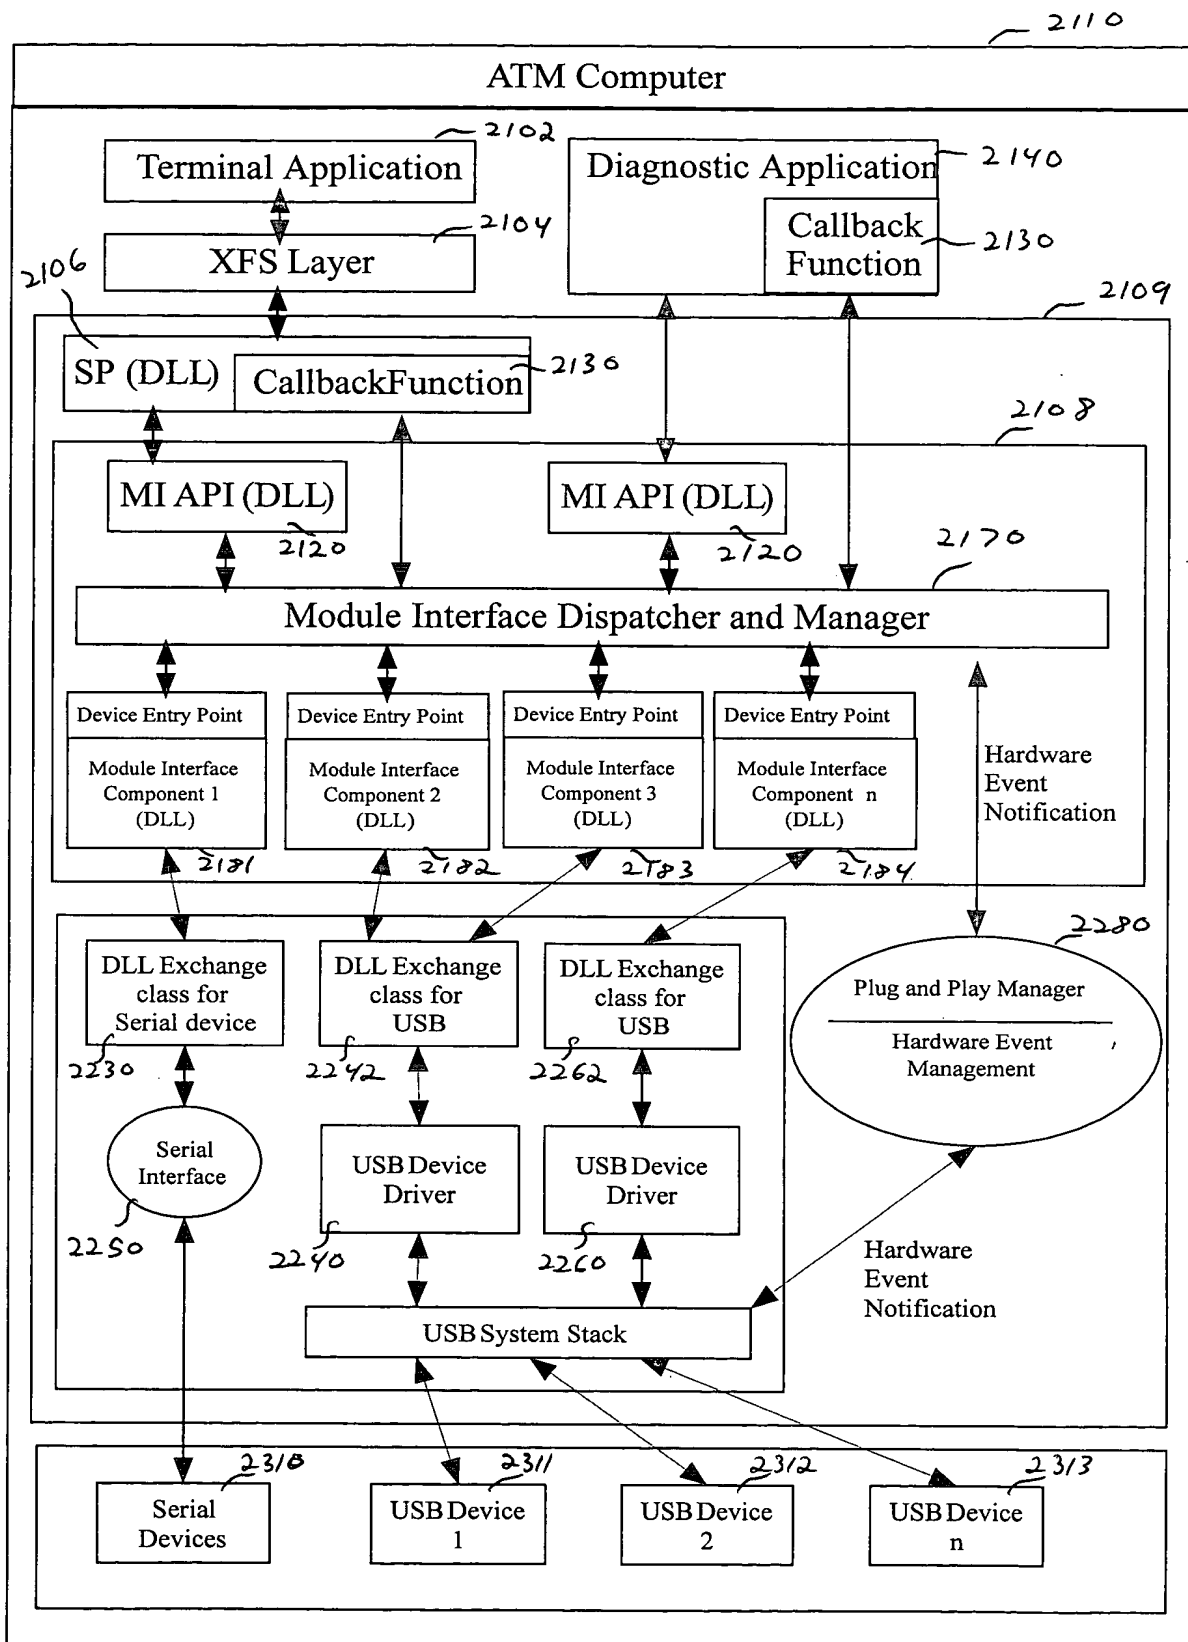 

**FIG. 18**

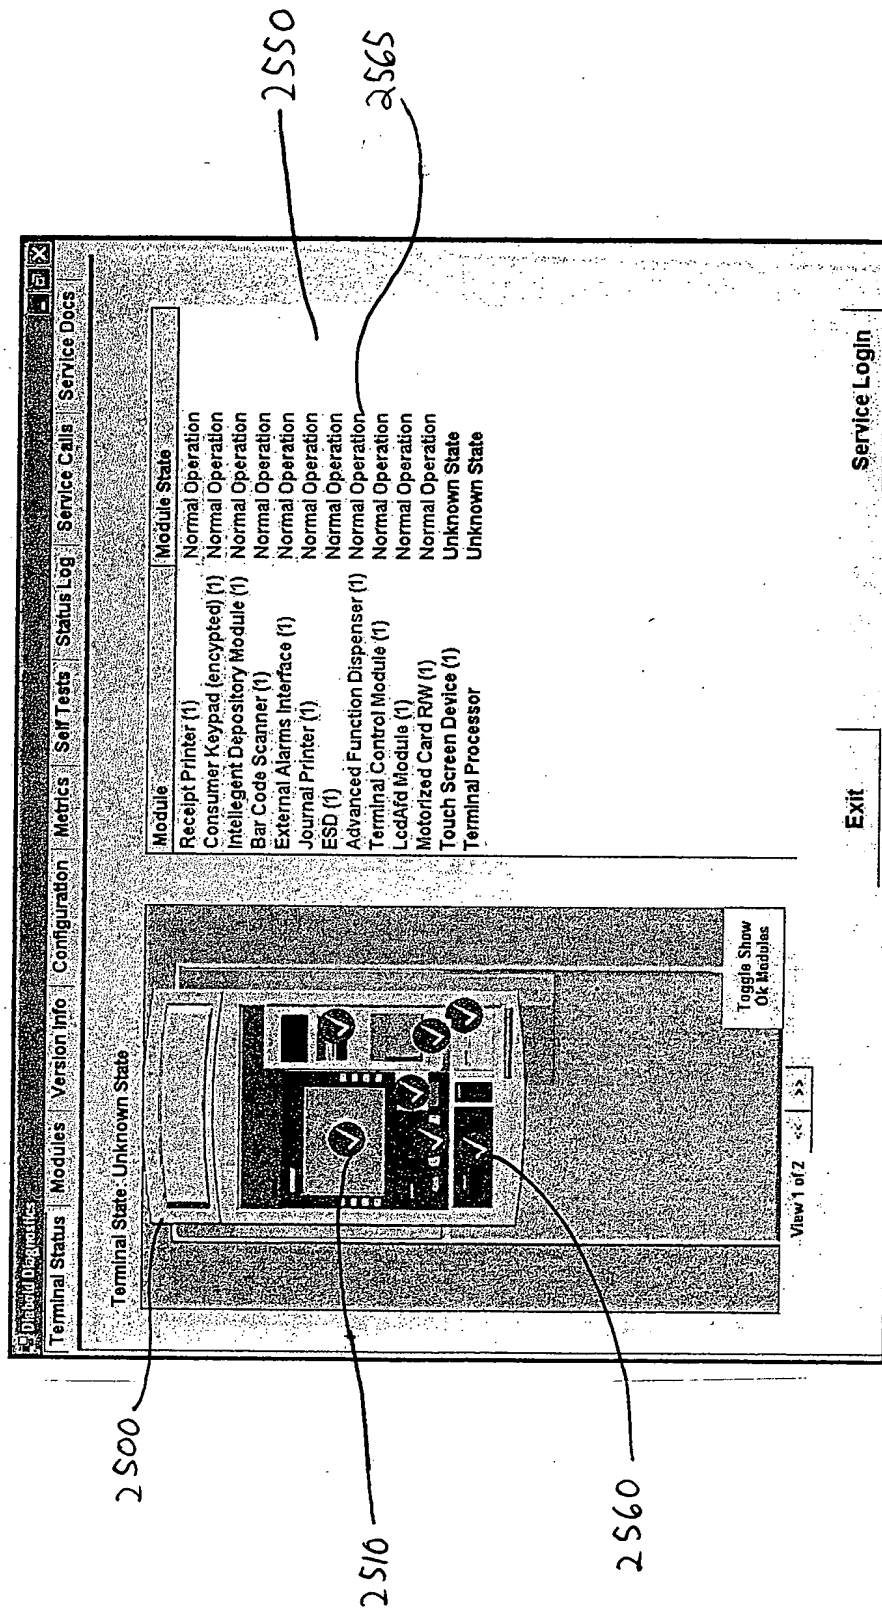 


FIG. 19


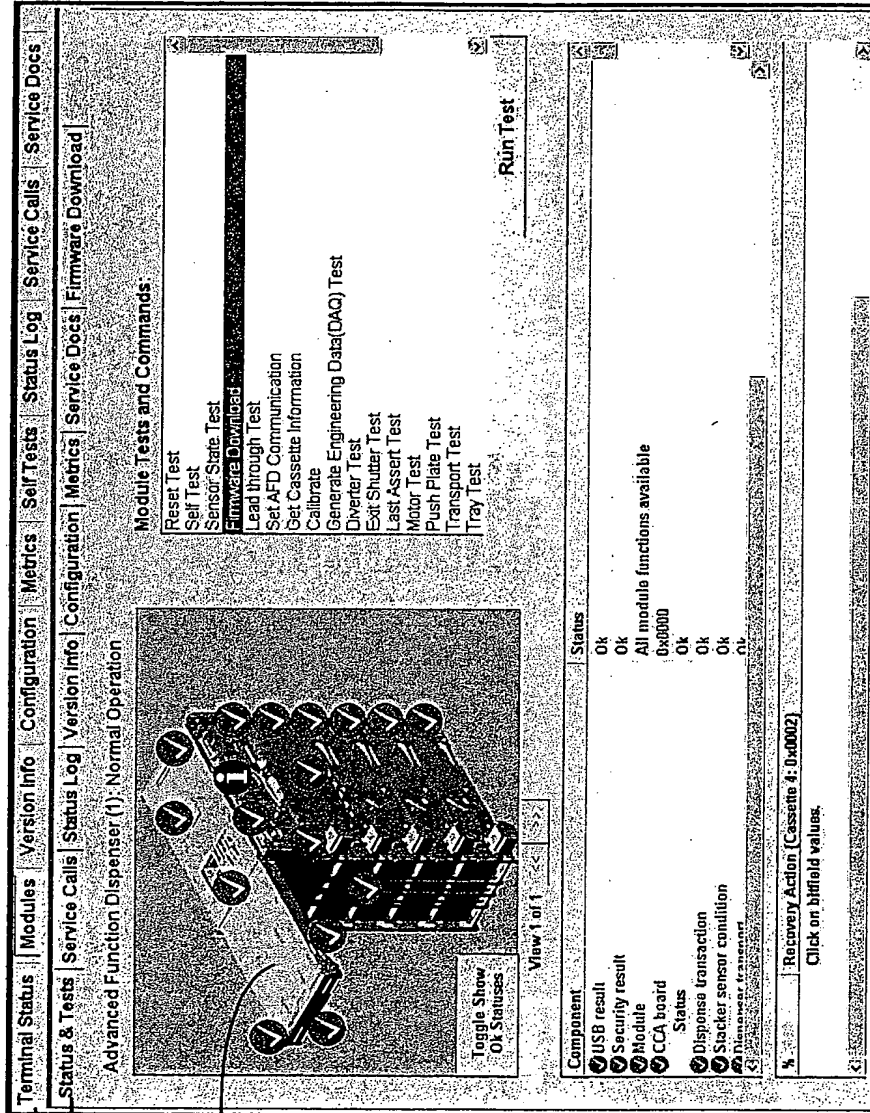 


FIG. 20

 

2520

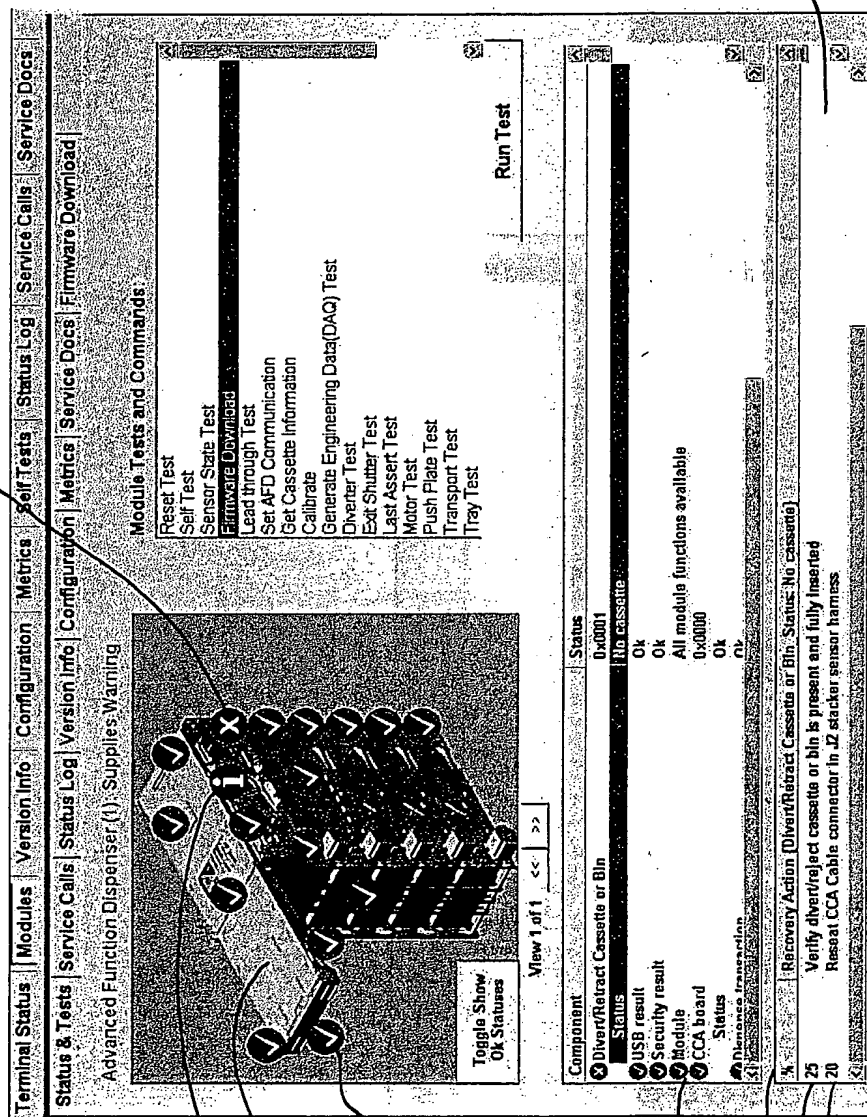

2610

FIG. 22

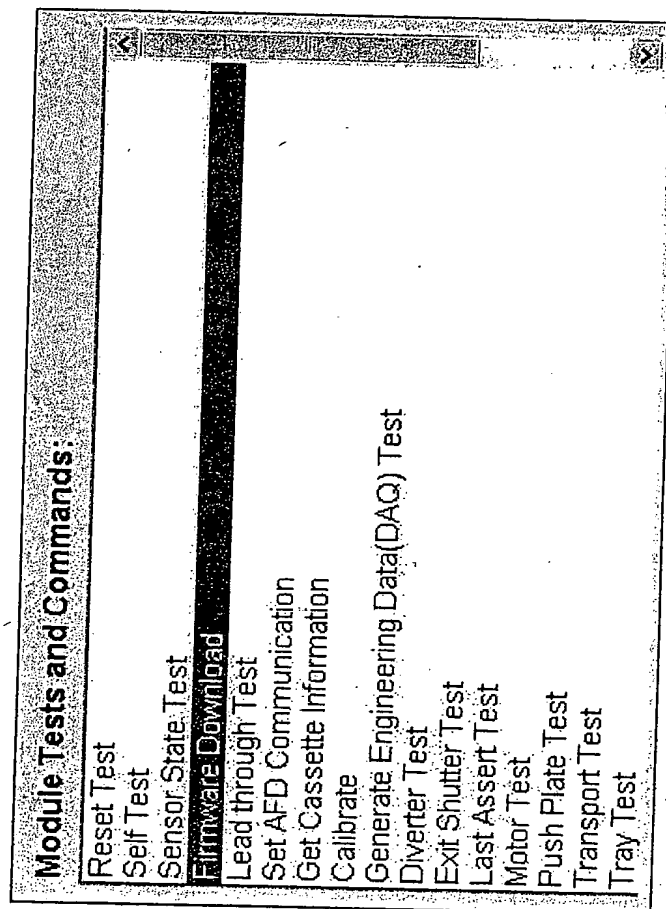 


FIG. 23

Diebold Diagnostics

Terminal Status
Modules
Version Info
Configuration
Metrics
Self Tests
Status Log
Service Calls
Service Docs

Status & Tests
Service Calls
Status Log
Version Info
Configuration
Metrics
Service Docs


Address:
D:\Techpubs\BOOKS\TM\EC0001\001\TM\01\001\001\1.htm#25173002
Go

Back
Forward
Home

## 4.1.2 Replacement


To replace the fascia plate, reverse the removal procedure.  
Grease the gate with Diebold lubricant (PN 16-003082-000A) before

  Figure 4-1 Removing the Lead-through Indicator and Exit

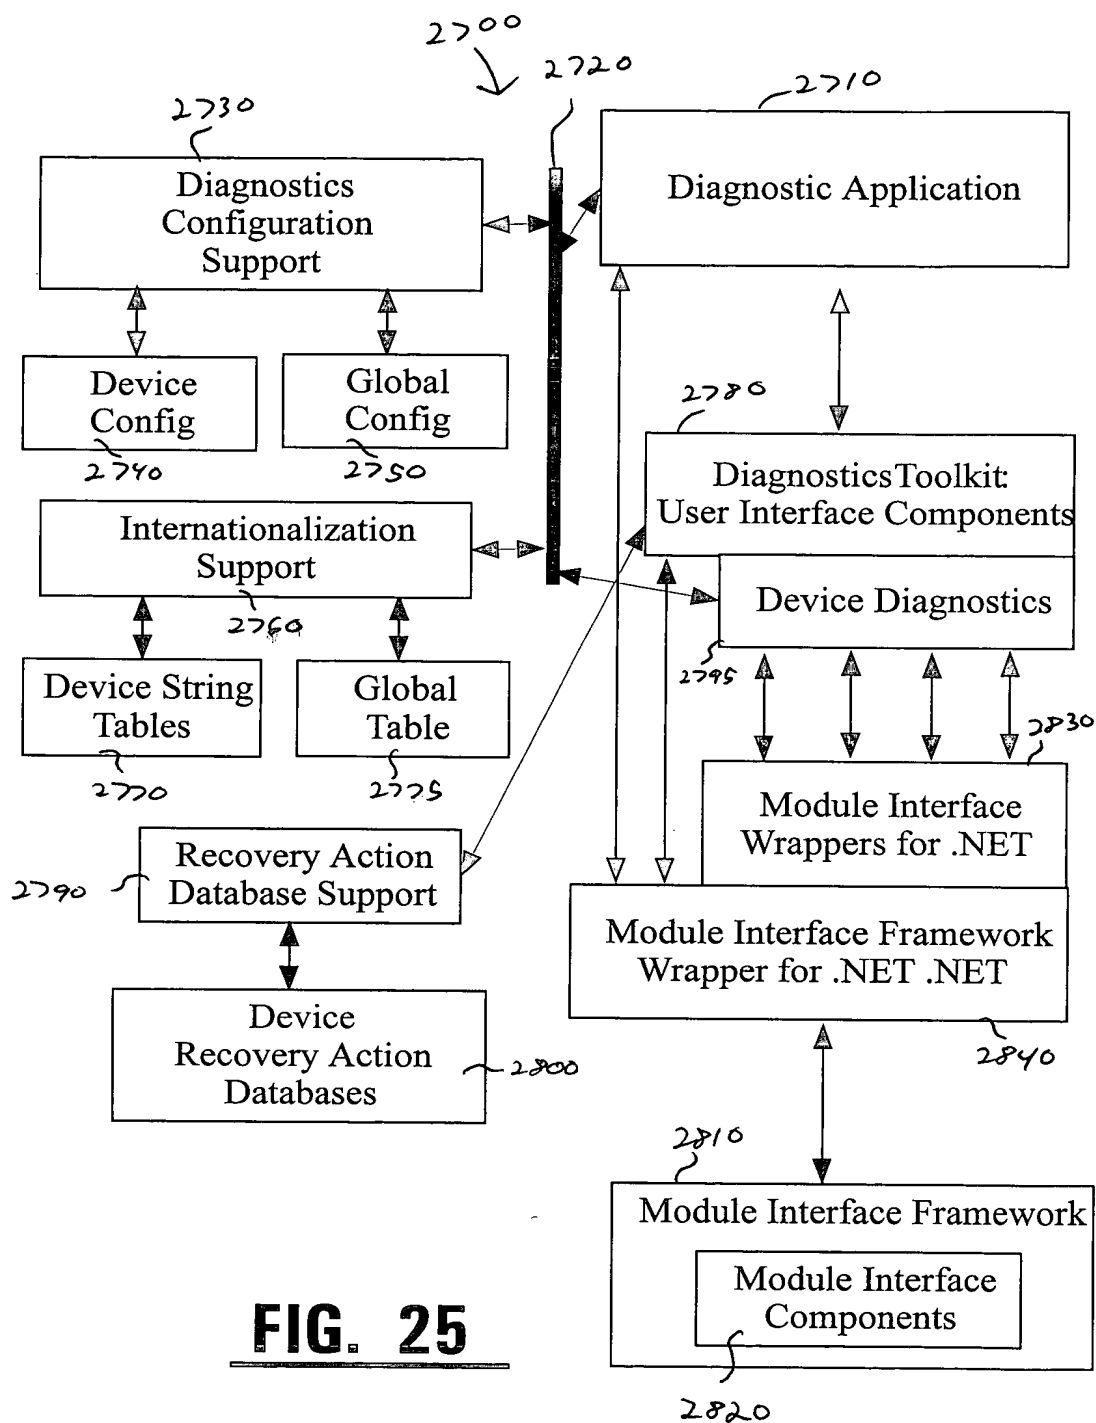 


**FIG. 25**




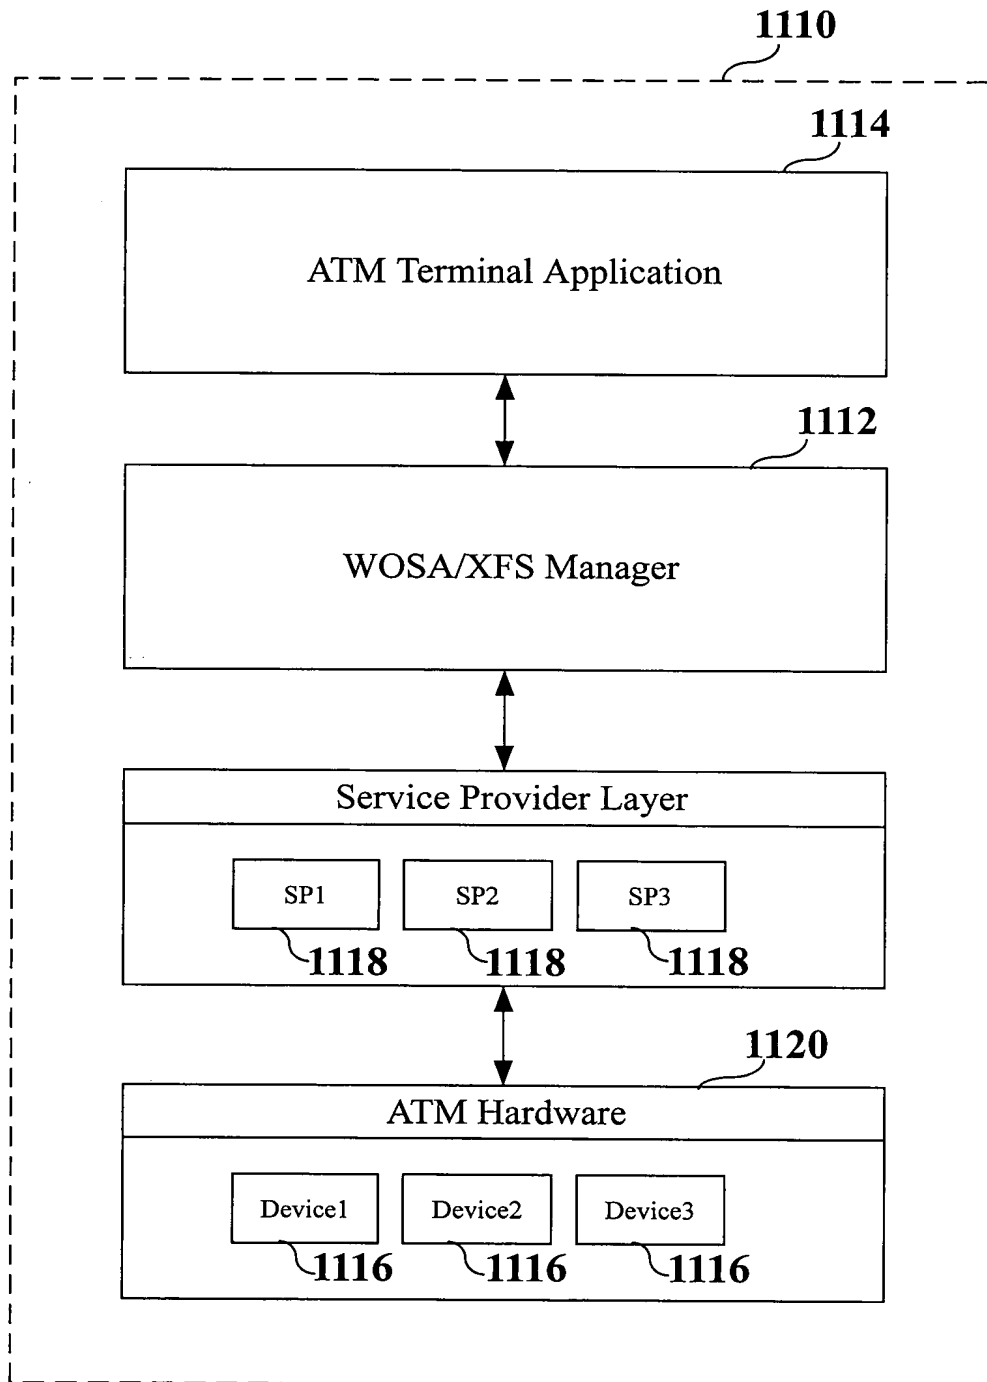


**FIG. 26**

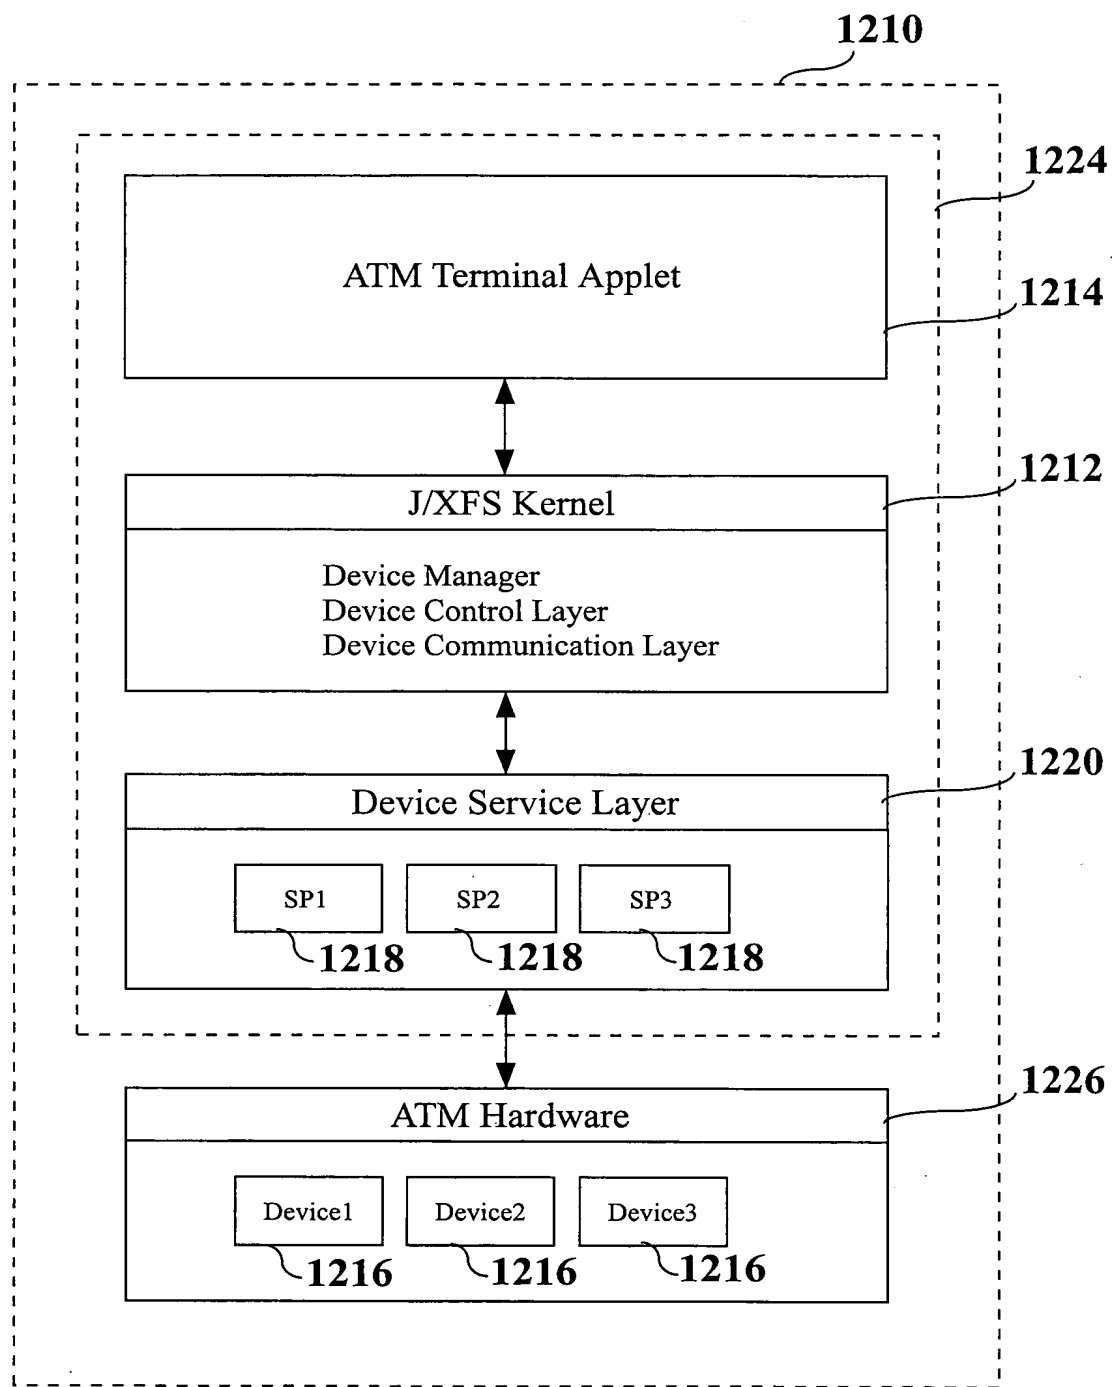


**FIG. 27**

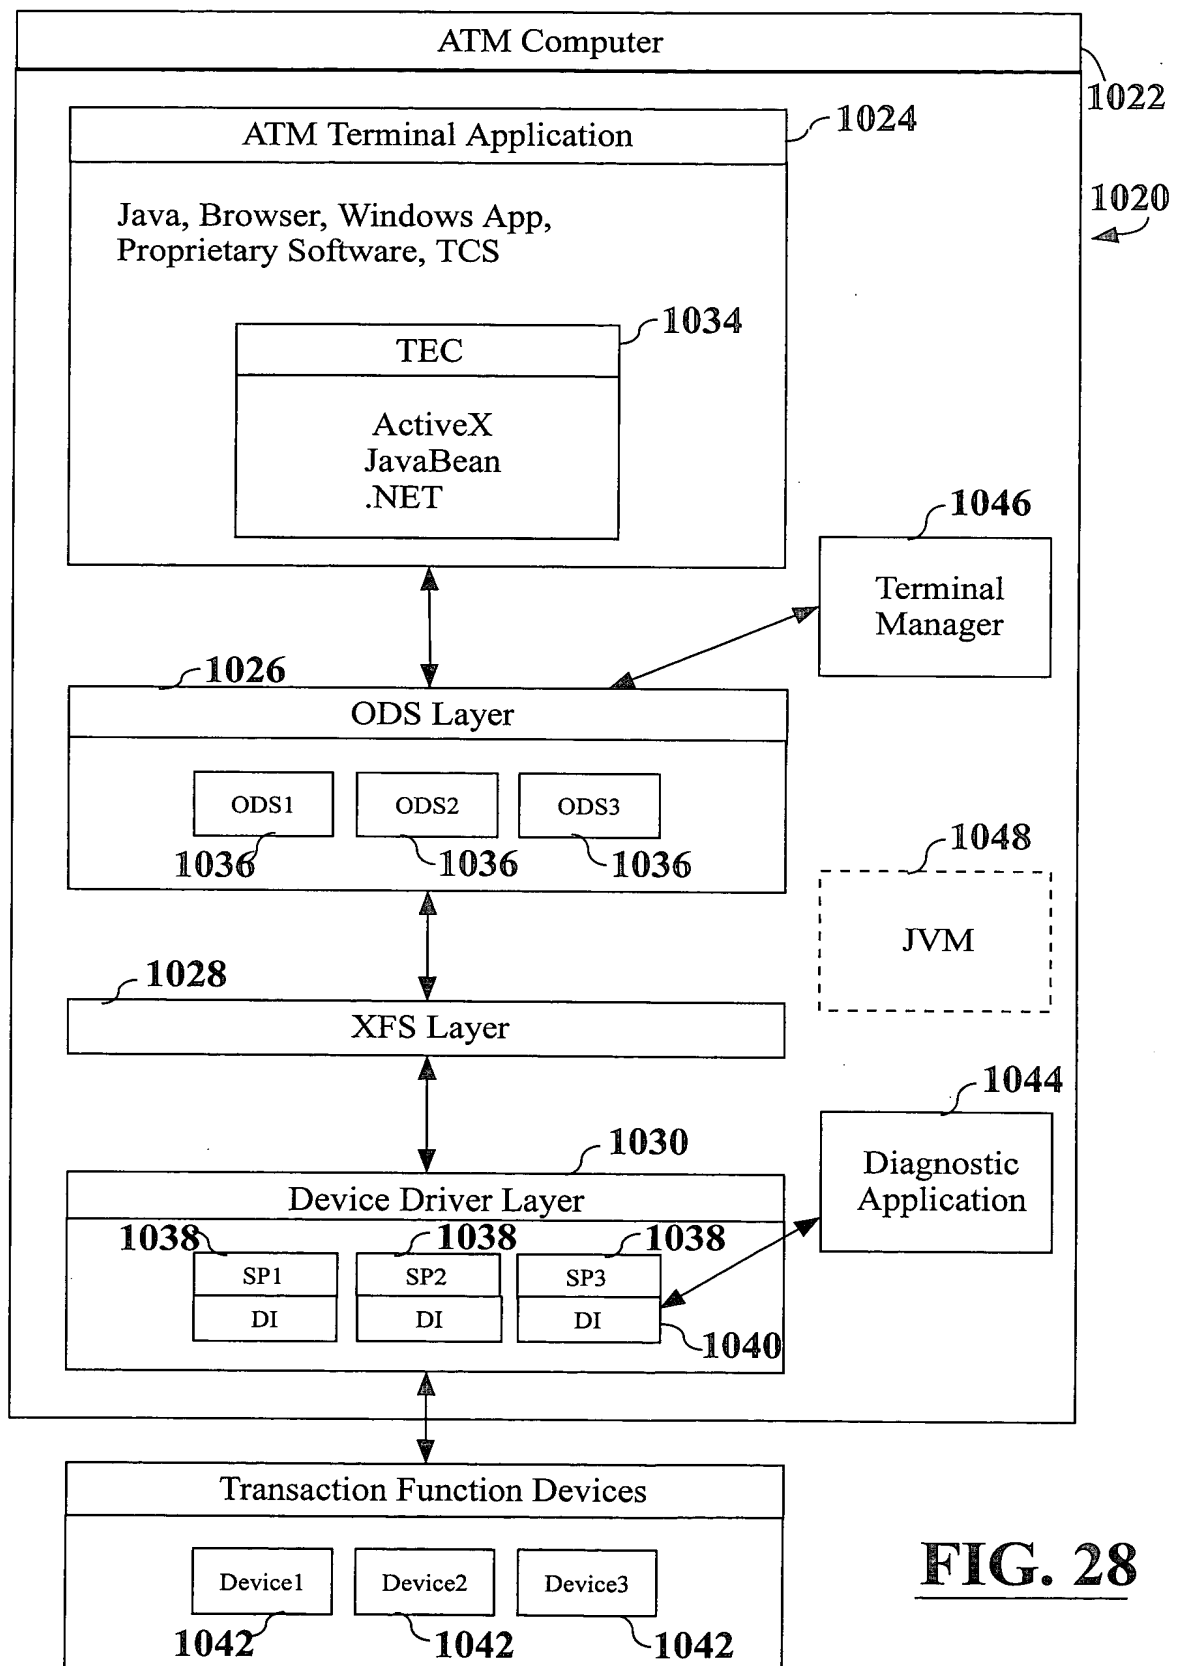 


**FIG. 28**

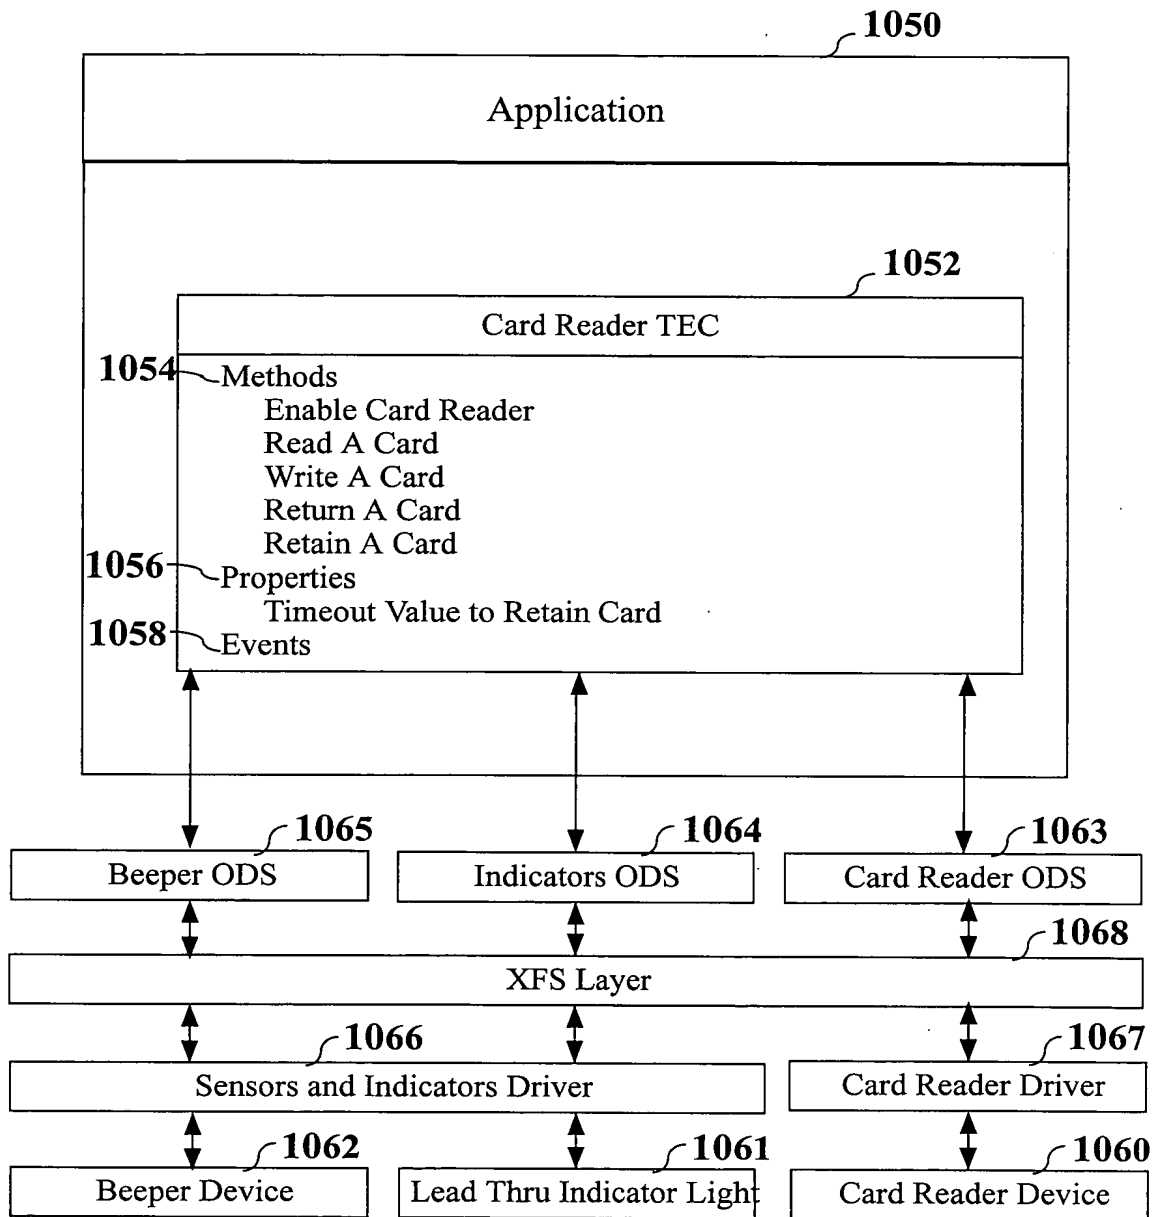 


**FIG. 29**

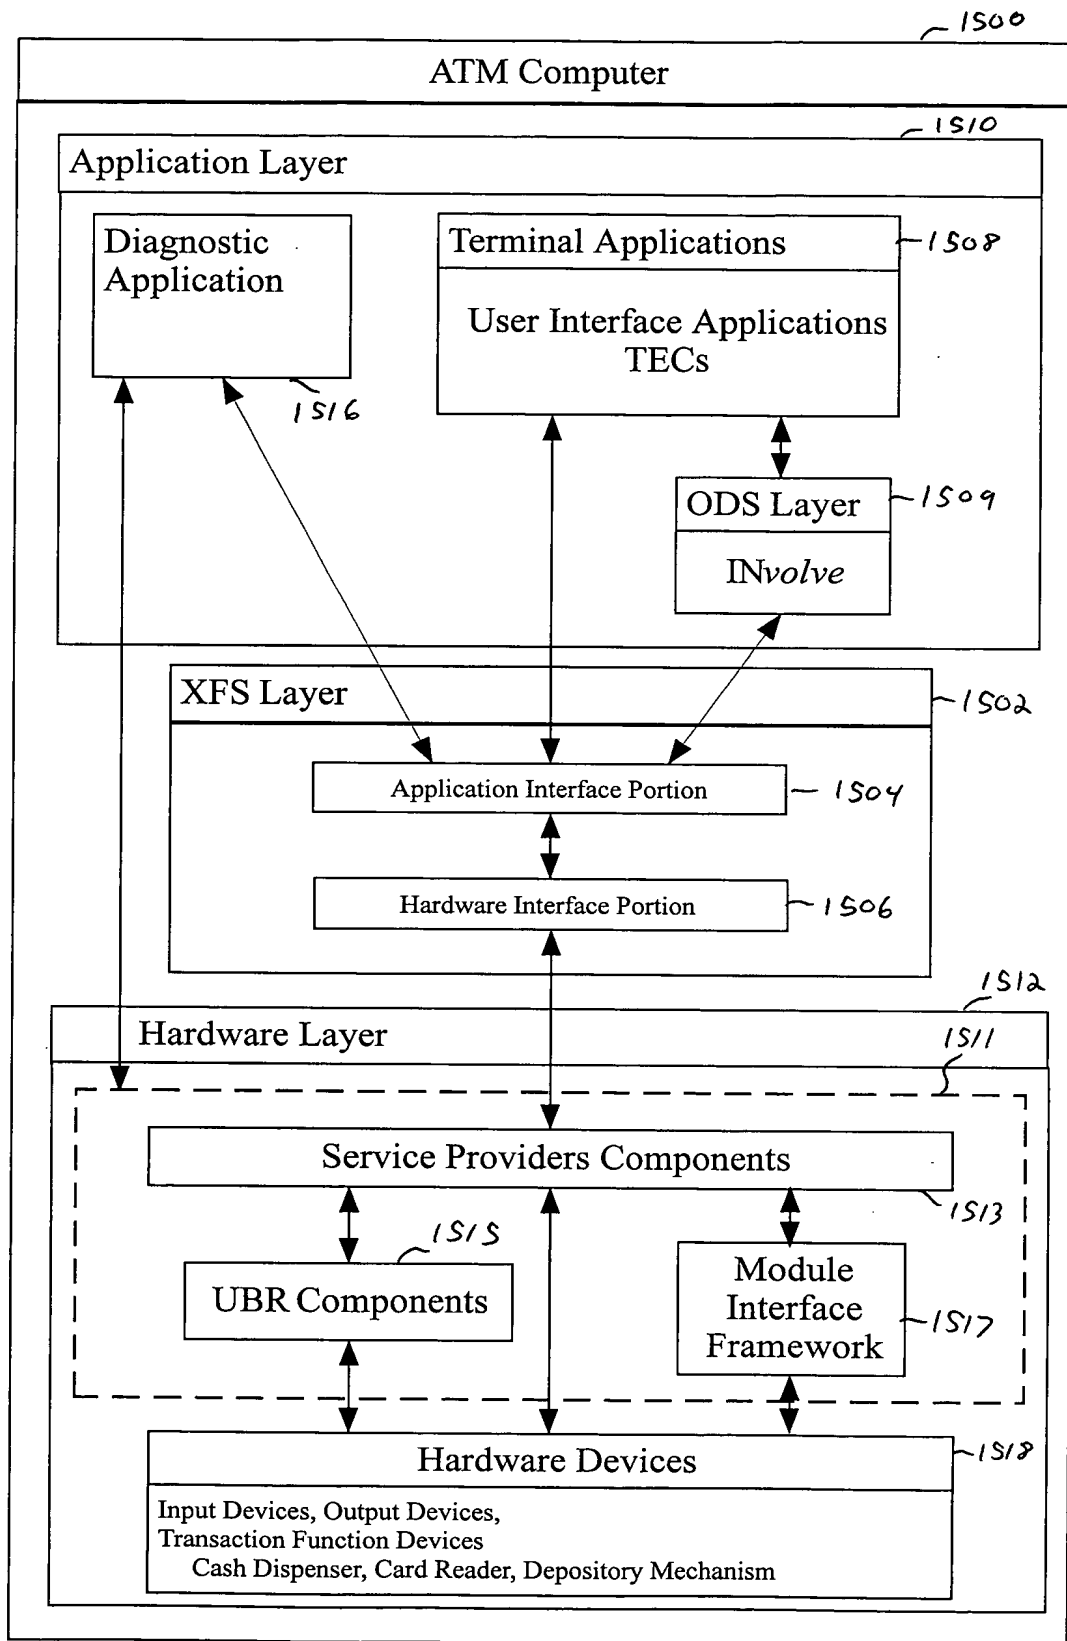 


**FIG. 30**

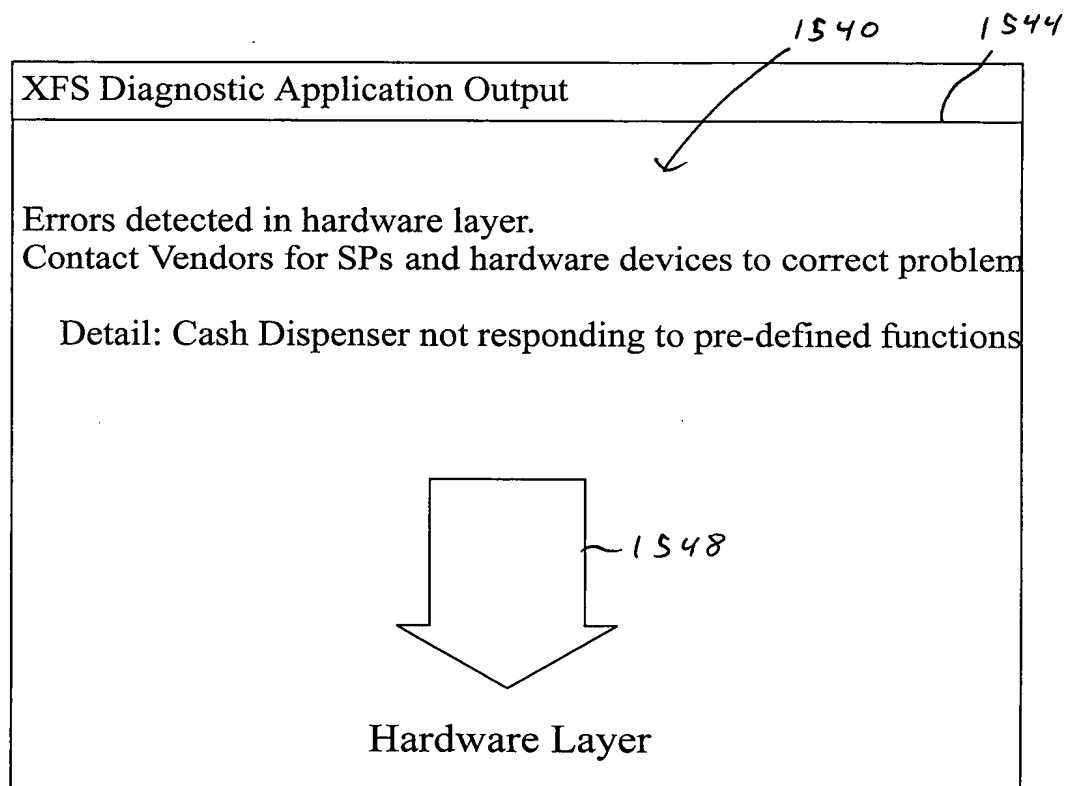 

**FIG. 31**

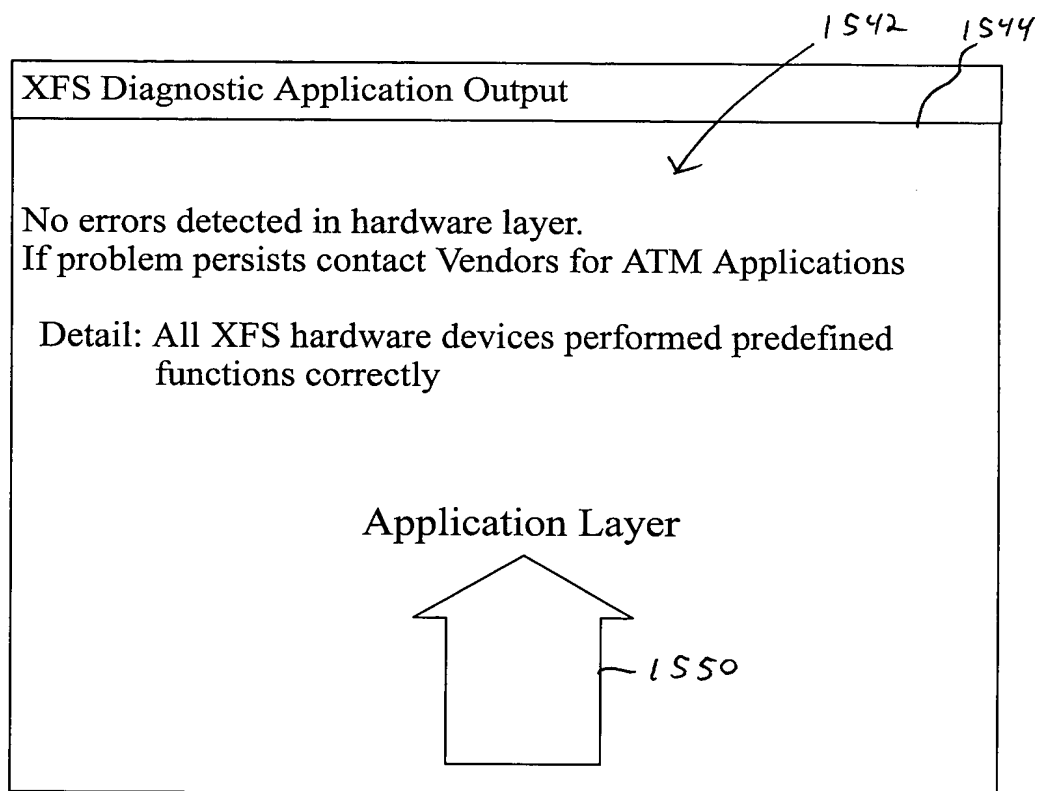 

**FIG. 32**

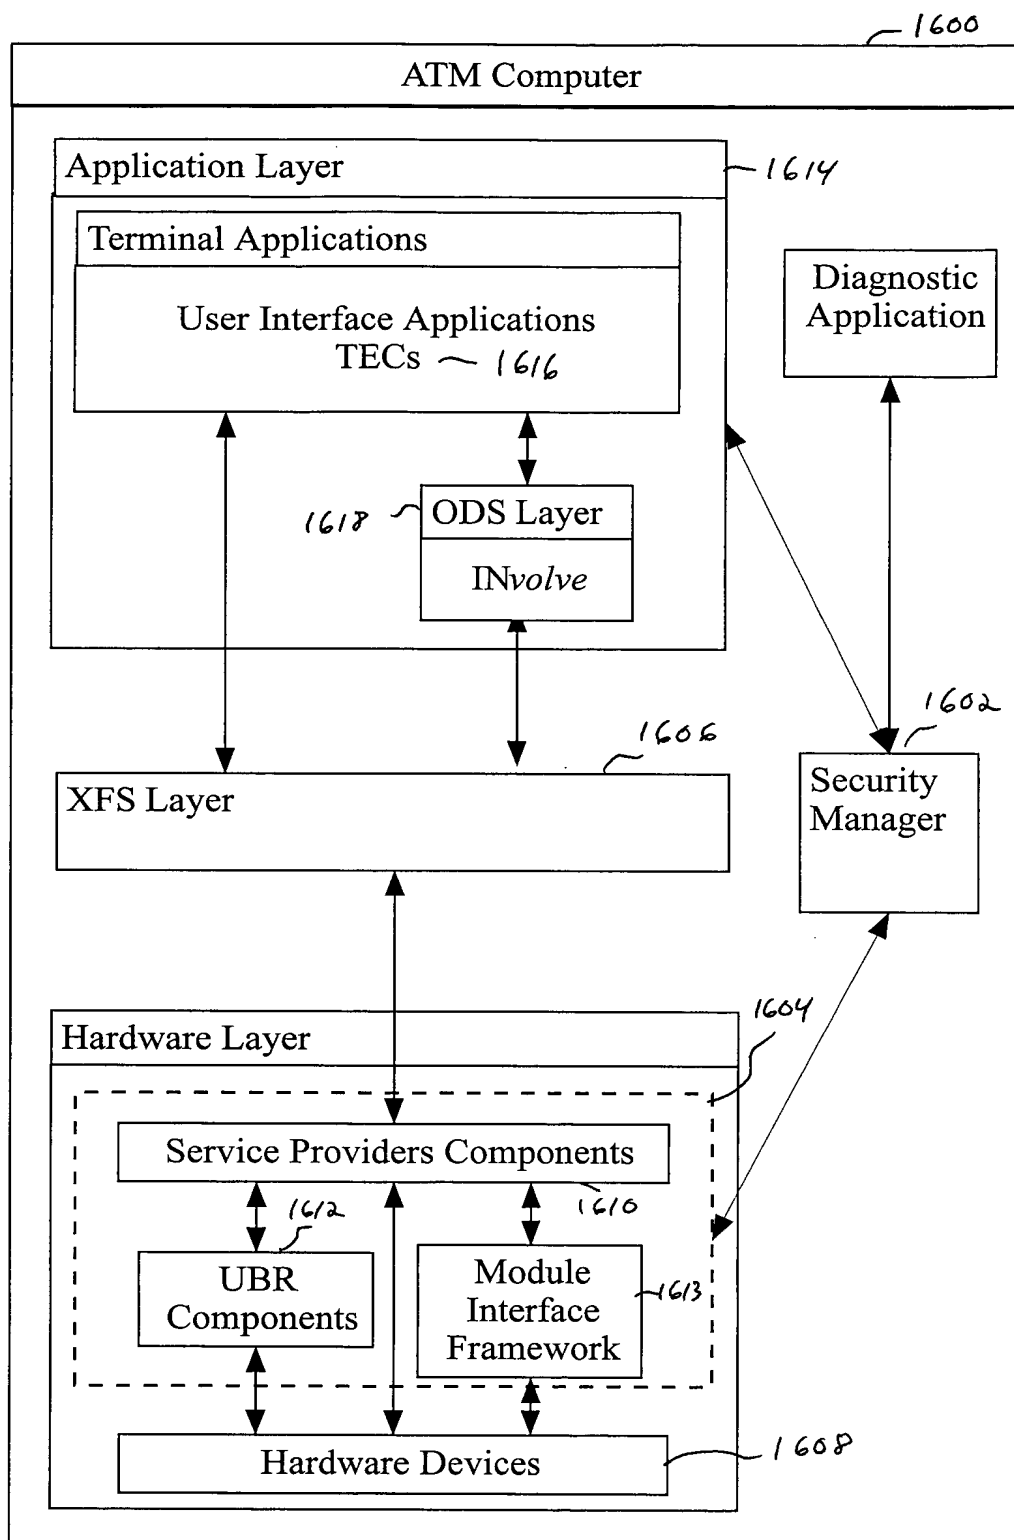 

**FIG. 33**